

# Operation & Maintenance Manual

# MX352

## HYDRAULIC EXCAVATOR

SERIAL NUMBERS **MX352 6Y6069** and up

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2004 Komatsu  
Printed in U.S.A.  
Komatsu America Corp.

December 2003

# CONTENTS

## FOREWORD

**FOREWORD** ..... 1-2

**SAFETY INFORMATION** ..... 1-5

**INTRODUCTION** ..... 1-7

    DIRECTIONS OF MACHINE ..... 1-7

**PRODUCT INFORMATION** ..... 1-8

    PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE ..... 1-8

    ENGINE SERIAL NUMBER PLATE AND ITS LOCATION ..... 1-8

    EMISSION CONTROL INFORMATION LABEL AND ITS LOCATION ..... 1-9

    SERVICE METER LOCATION ..... 1-9

    YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR ..... 1-9

**CONTENTS** ..... 1-10

## SAFETY

**SAFETY INFORMATION** ..... 2-2

**SAFETY LABELS** ..... 2-4

    LOCATION OF SAFETY LABELS ..... 2-4

    SAFETY LABELS ..... 2-5

**SAFETY INFORMATION** ..... 2-10

**SAFETY MACHINE OPERATION** ..... 2-20

    STARTING ENGINE ..... 2-20

    OPERATION ..... 2-22

    TRANSPORTATION ..... 2-28

    BATTERY ..... 2-29

    TOWING ..... 2-31

    LIFTING OBJECTS WITH BUCKET ..... 2-32

**SAFETY MAINTENANCE INFORMATION** ..... 2-33

## OPERATION

**MACHINE VIEW ILLUSTRATIONS** ..... 3-2

    OVERALL MACHINE VIEW ..... 3-2

    CONTROLS AND GAUGES ..... 3-3

**DETAILED CONTROLS AND GAUGES** ..... 3-4