

# Operation & Maintenance Manual

# MX502

## HYDRAULIC EXCAVATOR

**SERIAL NUMBERS MX50 7038 and up**

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2004 Komatsu  
Printed in U.S.A.  
Komatsu America Corp.

March 2004

# CONTENTS

FOREWORD .....	1- 1
FOREWORD .....	1- 2
SAFETY INFORMATION .....	1- 5
INTRODUCTION .....	1- 7
DIRECTIONS OF MACHINE .....	1- 7
PRODUCT INFORMATION .....	1- 8
PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE .....	1- 8
ENGINE SERIAL NUMBER PLATE AND ITS LOCATION .....	1- 8
EMISSION CONTROL INFORMATION LABEL AND ITS LOCATION .....	1- 9
SERVICE METER LOCATION .....	1- 9
YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR .....	1- 10
SAFETY .....	2- 1
SAFETY INFORMATION .....	2- 2
SAFETY LABELS .....	2- 4
LOCATION OF SAFETY LABELS .....	2- 4
SAFETY LABELS .....	2- 5
SAFETY INFORMATION .....	2- 10
SAFETY MACHINE OPERATION .....	2- 19
STARTING ENGINE .....	2- 19
OPERATION .....	2- 21
TRANSPORTATION .....	2- 27
BATTERY .....	2- 28
TOWING .....	2- 30
LIFTING OBJECTS WITH BUCKET .....	2- 31
SAFETY MAINTENANCE INFORMATION .....	2- 32
OPERATION .....	3- 1
MACHINE VIEW ILLUSTRATIONS .....	3- 2
OVERALL MACHINE VIEW .....	3- 2
CONTROLS AND GAUGES .....	3- 3
DETAILED CONTROLS AND GAUGES .....	3- 4
MONITORING SYSTEM .....	3- 4
SWITCHES .....	3- 12
CONTROL LEVERS AND PEDALS .....	3- 16
WINDSHIELD .....	3- 22
SLIDING DOOR .....	3- 26
SLIDING WINDOW .....	3- 26
EMERGENCY ESCAPE HAMMER .....	3- 27
COVER WITH LOCK .....	3- 28
ENGINE REAR COVER .....	3- 29
COOLING COVER .....	3- 29
MUD COVER .....	3- 30
METHOD OF OPENING (TILTING) FLOOR .....	3- 31
FUUSE .....	3- 36
BLOCK FUUSE .....	3- 37
AUXILIARY ELECTRIC POWER .....	3- 38
OPERATION MANUAL STORAGE .....	3- 39
TOOL BOX .....	3- 39
GREASE GUN HOLDER .....	3- 39
ASHTRAY .....	3- 39

MACHINE OPERATIONS AND CONTROLS -----	3- 40
BEFORE STARTING ENGINE -----	3- 40
STARTING ENGINE -----	3- 54
AFTER STARTING ENGINE -----	3- 58
STOPPING THE ENGINE -----	3- 61
MACHINE OPERATION -----	3- 62
STEERING THE MACHINE -----	3- 67
SWINGING -----	3- 69
WORK EQUIPMENT CONTROLS AND OPERATIONS -----	3- 70
PROHIBITED OPERATIONS -----	3- 72
GENERAL OPERATION INFORMATION -----	3- 74
TRAVELING ON SLOPES -----	3- 75
ESCAPE FROM MUD -----	3- 77
WORK POSSIBLE USING COMPACT HYDRAULIC EXCAVATOR -----	3- 78
BUCKET REPLACEMENT -----	3- 80
PARKING MACHINE -----	3- 81
CHECK AFTER SHUT OFF ENGINE -----	3- 82
MACHINE INSPECTION AFTER DAILY WORK -----	3- 82
LOCKING -----	3- 83
RUBBER SHOES AND ROAD LINERS -----	3- 84
TRANSPORTATION -----	3- 89
TRANSPORTATION PROCEDURE -----	3- 89
LOADING AND UNLOADING WITH TRAILER -----	3- 90
LIFTING MACHINE -----	3- 96
COLD WEATHER OPERATION -----	3- 99
COLD WEATHER OPERATION INFORMATION -----	3- 99
CAB HEATER IN COLD WEATHER -----	3-100
AFTER DAILY WORK COMPLETION -----	3-101
AFTER COLD WEATHER SEASON -----	3-101
LONG TERM STORAGE -----	3-102
BEFORE STORAGE -----	3-102
DURING STORAGE -----	3-103
AFTER STORAGE -----	3-103
TROUBLES AND ACTIONS -----	3-104
RUNNING OUT OF FUEL -----	3-104
PHENOMENA THAT ARE NOT FAILURES -----	3-104
TOWING THE MACHINE -----	3-105
SEVERE JOB CONDITION -----	3-105
DISCHARGED BATTERY -----	3-106
OTHER TROUBLE -----	3-110
MAINTENANCE -----	4- 1
MAINTENANCE INFORMATION -----	4- 2
LUBRICANTS, COOLANT AND FILTERS -----	4- 4
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC -----	4- 4
ELECTRIC SYSTEM MAINTENANCE -----	4- 6
HANDLING HYDRAULIC SYSTEM -----	4- 7
WEAR PARTS -----	4- 8
WEAR PARTS LIST -----	4- 8
LUBRICANTS, FUEL AND COOLANT SPECIFICATIONS -----	4- 9
TIGHTENING TORQUE SPECIFICATIONS -----	4- 13