

Operation & Maintenance Manual

SEAM040601

PC03-2

HYDRAULIC EXCAVATOR

SERIAL NUMBERS PC03-21587 and up

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU

5. CONTENTS

1. Foreword	0-1
2. Safety information	0-2
3. Introduction	0-3
4. Location of plates, table to enter serial No. and distributor	0-4

SAFETY

6. General precautions	1-2
7. Precautions during operation	1- 8
7.1 Before starting engine	1- 8
7.2 Operating machine	1-11
7.3 Transportation	1-17
7.4 Battery	1-18
7.5 Towing	1-20
7.6 Bucket with hook	1-21
8. Precautions for maintenance	1-25
8.1 Before carrying out maintenance	1-25
8.2 During maintenance	1-28
9. Position for attaching safety labels	1-33

OPERATION

10. General view	2- 2
10.1 General view of machine	2- 2
10.2 General view of controls and gauges	2- 3
11. Explanation of components	2- 4
11.1 Meters, lamps	2- 4
11.2 Switches	2- 6
11.3 Control levers, pedals	2- 8
11.4 Engine hood	2-14
11.5 Fuse box	2-15
11.6 Fusible link	2-16
11.7 Operation manual storage	2-16
12. Operation	2-17
12.1 Check before starting engine	2-17
12.2 Starting engine	2-28
12.3 Operations and checks after starting engine	2-31
12.4 Moving machine off	2-34
12.5 Steering machine	2-38
12.6 Stopping machine	2-40
12.7 Swinging	2-41
12.8 Operation of work equipment	2-42
12.9 Prohibitions for operation	2-45
12.10 Precautions for operation	2-48
12.11 Precautions when traveling up or down hills	2-49
12.12 How to escape from mud	2-51
12.13 Work possible using hydraulic excavator	2-52
12.14 Replacement of bucket	2-54
12.15 Handling rubber shoes	2-56
12.16 Parking machine	2-61
12.17 Checks after finishing work	2-62
12.18 Stopping engine	2-63
12.19 Checks after stopping engine	2-63
12.20 Locking	2-64