

# Operation & Maintenance Manual

**KOMATSU**

**PC05-6, PC10-6**

**PC15-2**

**HYDRAULIC EXCAVATOR**

SERIAL NUMBERS

**PC05- 6006**

**PC10-21446** and up

**PC15- 2809**

# CONTENTS

<b>OPERATION</b>		<b>MAINTENANCE</b>	
GENERAL LOCATIONS AND SPECIFICATIONS .....	4	PERIODIC MAINTENANCE .....	59
INSTRUMENTS AND CONTROLS .....	6	MAINTENANCE TABLE .....	60
OIL FILLER AND LEVEL GAUGE POSITIONS .....	22	INITIAL 50 HOURS SERVICE .....	63
CHECK BEFORE STARTING .....	24	EVERY 50 HOURS SERVICE .....	63
OPERATING YOUR MACHINE .....	28	EVERY 100 HOURS SERVICE .....	66
REPLACEMENT OF BUCKET .....	50	INITIAL 250 HOURS SERVICE .....	68
METHOD OF LIFTING THE MACHINE .....	52	EVERY 250 HOURS SERVICE .....	69
COLD WEATHER OPERATION .....	55	EVERY 500 HOURS SERVICE .....	80
		EVERY 2000 HOURS SERVICE .....	84
		WHEN REQUIRED .....	86
		HANDLING RUBBER SHOES .....	93
		SERVICE METER .....	98
		MACHINE AND ENGINE SERIAL NUMBERS .....	99
		FUEL, COOLANT AND LUBRICANTS .....	100