

# SHOP MANUAL

## **KOMATSU**

# **PC05-6, PC07-1 PC10-6, PC15-2**

MACHINE MODEL	SERIAL No.
<b>PC05-6</b>	<b>11301 and up</b>
<b>PC07-1</b>	<b>10001 and up</b>
<b>PC10-6</b>	<b>10501 and up</b>
<b>PC15-2</b>	<b>10001 and up</b>

This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.

# CONTENTS

No. of page

<b>10 STRUCTURE AND FUNCTION</b> .....	10-1
<b>20 TESTING AND ADJUSTING</b> .....	20-1
<b>30 DISASSEMBLY AND ASSEMBLY</b> .....	30-1
<b>40 MAINTENANCE STANDARD</b> .....	40-1

020M06