

# SHOP

# MANUAL

## **KOMATSU**

### **PC100,100L-3**

### **PC120-3**

### **PC150HD,NHD-3**

MACHINE MODEL	SERIAL No.
<b>PC100-3</b>	<b>18001 and up</b>
<b>PC100L-3</b>	<b>12001 and up</b>
<b>PC120-3</b>	<b>18001 and up</b>
<b>PC120-3K</b>	<b>K10001 and up</b>
<b>PC150HD-3K</b>	<b>K10001 and up</b>
<b>PC150NHD-3K</b>	<b>K10001 and up</b>

# CONTENTS

	No. of page
<b>01 GENERAL</b> .....	01-1
<b>10 ENGINE</b>	
11 STRUCTURE AND FUNCTION .....	11-1
12 TESTING AND ADJUSTING .....	12-1
13 DISASSEMBLY AND ASSEMBLY .....	13-1
<b>20 POWER TRAIN</b>	
21 STRUCTURE AND FUNCTION .....	21-1
22 TESTING AND ADJUSTING (Refer "62 TESTING AND ADJUSTING")	
23 DISASSEMBLY AND ASSEMBLY .....	23-1
24 MAINTENANCE STANDARD .....	24-1
<b>30 UNDERCARRIAGE</b>	
31 STRUCTURE AND FUNCTION .....	31-1
33 DISASSEMBLY AND ASSEMBLY .....	33-1
34 MAINTENANCE STANDARD .....	34-1
<b>60 HYDRAULIC SYSTEM</b>	
61 STRUCTURE AND FUNCTION .....	61-1
62 TESTING AND ADJUSTING .....	62-1
63 DISASSEMBLY AND ASSEMBLY .....	63-1
64 MAINTENANCE STANDARD .....	64-1
<b>70 WORK EQUIPMENT</b>	
73 DISASSEMBLY AND ASSEMBLY .....	73-1
74 MAINTENANCE STANDARD .....	74-1
<b>80 ELECTRICAL SYSTEM</b>	
81 STRUCTURE AND FUNCTION .....	81-1
82 TESTING AND ADJUSTING .....	82-1
<b>90 OTHERS</b>	
91 STRUCTURE AND FUNCTION .....	91-1