

Shop Manual

PC1000-1 PC1000LC-1 PC1000SE-1 PC1000SP-1 HYDRAULIC EXCAVATOR

	PC1000-1	- 10001	
	PC1000LC-1	- 10001	
SERIAL NUMBERS	PC1000SE-1	- 10001	and up
	PC1000SP-1	- 10001	

This material is proprietary to Komatsu America International Company and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America International Company.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or add improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, periodic revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

CONTENTS

	No.of page
10 ENGINE	
11 STRUCTURE AND FUNCTION	11-1
12 TESTING AND ADJUSTING	12-1
13 DISASSEMBLY AND ASSEMBLY	13-1
14 MAINTENANCE STANDARD	14-1
20 POWER TRAIN	
21 STRUCTURE AND FUNCTION	21-1
23 DISASSEMBLY AND ASSEMBLY	23-1
24 MAINTENANCE STANDARD	24-1
30 UNDERCARRIAGE	
31 STRUCTURE AND FUNCTION	31-1
33 DISASSEMBLY AND ASSEMBLY	33-1
34 MAINTENANCE STANDARD	34-1
50 AIR SYSTEM	
51 STRUCTURE AND FUNCTION	51-1
60 HYDRAULIC SYSTEM	
61 STRUCTURE AND FUNCTION	61-1
62 TESTING AND ADJUSTING	62-1
63 DISASSEMBLY AND ASSEMBLY	63-1
64 MAINTENANCE STANDARD	64-1
80 ELECTRIC AND ELECTRONIC SYSTEM	
81 STRUCTURE AND FUNCTION	81-1
82 TESTING AND ADJUSTING	82-1

021N01