



# SHOP MANUAL

**KOMATSU**

**PC100-100L-2**  
**PC120-2**

MACHINE MODEL SERIAL No.

<b>PC100-2</b>	<b>13001 and up</b>
<b>PC100L-2</b>	<b>11001 and up</b>
<b>PC120-2</b>	<b>14001 and up</b>

# CONTENTS

	No. of page
<b>GENERAL .....</b>	<b>01-1</b>
<b>ENGINE</b>	
11 STRUCTURE AND FUNCTION .....	11-1
12 TESTING AND ADJUSTING .....	12-1
13 DISASSEMBLY AND ASSEMBLY .....	13-1
<b>POWER TRAIN</b>	
21 STRUCTURE AND FUNCTION .....	21-1
23 DISASSEMBLY AND ASSEMBLY .....	23-1
24 MAINTENANCE STANDARD .....	24-1
<b>UNDERCARRIAGE</b>	
31 STRUCTURE AND FUNCTION .....	31-1
33 DISASSEMBLY AND ASSEMBLY .....	33-1
34 MAINTENANCE STANDARD .....	34-1
<b>HYDRAULIC SYSTEM</b>	
61 STRUCTURE AND FUNCTION .....	61-1
62 TESTING AND ADJUSTING .....	62-1
63 DISASSEMBLY AND ASSEMBLY .....	63-1
64 MAINTENANCE STANDARD .....	64-1
<b>WORK EQUIPMENT</b>	
71 STRUCTURE AND FUNCTION .....	71-1
73 DISASSEMBLY AND ASSEMBLY .....	73-1
74 MAINTENANCE STANDARD .....	74-1
<b>ELECTRICAL SYSTEM</b>	
88 ELECTRICAL SYSTEM .....	88-1
<b>OTHERS .....</b>	<b>91-1</b>