

SHOP

MANUAL

KOMATSU

PC100,100L-3

PC120-3

PC150HD,NHD-3

MACHINE MODEL	SERIAL No.
PC100-3	18001 and up
PC100L-3	12001 and up
PC120-3	18001 and up
PC120-3K	K10001 and up
PC150HD-3K	K10001 and up
PC150NHD-3K	K10001 and up

CONTENTS

	No. of page
01 GENERAL	01-1
 10 ENGINE	
11 STRUCTURE AND FUNCTION	11-1
12 TESTING AND ADJUSTING	12-1
13 DISASSEMBLY AND ASSEMBLY	13-1
 20 POWER TRAIN	
21 STRUCTURE AND FUNCTION	21-1
22 TESTING AND ADJUSTING (Refer "62 TESTING AND ADJUSTING")	
23 DISASSEMBLY AND ASSEMBLY	23-1
24 MAINTENANCE STANDARD	24-1
 30 UNDERCARRIAGE	
31 STRUCTURE AND FUNCTION	31-1
33 DISASSEMBLY AND ASSEMBLY	33-1
34 MAINTENANCE STANDARD	34-1
 60 HYDRAULIC SYSTEM	
61 STRUCTURE AND FUNCTION	61-1
62 TESTING AND ADJUSTING	62-1
63 DISASSEMBLY AND ASSEMBLY	63-1
64 MAINTENANCE STANDARD	64-1
 70 WORK EQUIPMENT	
73 DISASSEMBLY AND ASSEMBLY	73-1
74 MAINTENANCE STANDARD	74-1
 80 ELECTRICAL SYSTEM	
81 STRUCTURE AND FUNCTION	81-1
82 TESTING AND ADJUSTING	82-1
 90 OTHERS	
91 STRUCTURE AND FUNCTION	91-1