

# Operation & Maintenance Manual

HYDRAULIC  
EXCAVATOR

**PC1250 -7**

**PC1250SP-7**

**PC1250LC -7**

SERIAL NUMBERS 20001 and up

**⚠ WARNING**

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

**NOTICE**

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

**KOMATSU**

# CONTENTS

FOREWORD .....	1- 1
FOREWORD .....	1- 2
SAFETY INFORMATION .....	1- 5
INTRODUCTION .....	1- 7
DIRECTIONS OF MACHINE .....	1- 7
BREAKING-IN THE NEW MACHINE .....	1- 7
PRODUCT INFORMATION .....	1- 8
MACHINE SERIAL NUMBER PLATE AND ITS LOCATION .....	1- 8
ENGINE SERIAL NUMBER PLATE AND ITS LOCATION .....	1- 8
SERVICE METER LOCATION .....	1- 9
YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR .....	1- 10
SAFETY .....	2- 1
SAFETY .....	2- 2
SAFETY LABELS .....	2- 4
LOCATION OF SAFETY LABELS .....	2- 5
SAFETY LABELS .....	2- 6
GENERAL PRECAUTIONS .....	2- 12
SAFETY MACHINE OPERATION .....	2- 20
STARTING ENGINE .....	2- 20
OPERATION .....	2- 22
TRANSPORTATION .....	2- 28
BATTERY .....	2- 29
TOWING .....	2- 31
SAFETY MAINTENANCE INFORMATION .....	2- 32
OPERATION .....	3- 1
MACHINE VIEW ILLUSTRATIONS .....	3- 2
OVERALL MACHINE VIEW .....	3- 2
CONTROLS AND GAUGES .....	3- 3
DETAILED CONTROLS AND GAUGES .....	3- 5
MONITORING SYSTEM .....	3- 5
SWITCHES .....	3- 29
CONTROL LEVERS AND PEDALS .....	3- 35
EMERGENCY EXIT FROM OPERATOR'S CAB .....	3- 37
DOOR LOCK .....	3- 37
CAP WITH LOCK .....	3- 38
HOT AND COOL BOX .....	3- 40
MAGAZINE BOX .....	3- 40
ASHTRAY .....	3- 40
AIR CONDITIONER CONTROLS .....	3- 41
RADIO .....	3- 56
AUXILIARY ELECTRIC POWER .....	3- 60
FUSE .....	3- 61
CIRCUIT BREAKER .....	3- 62
CONTROLLER .....	3- 64
TOOL BOX .....	3- 64
GREASE PUMP .....	3- 65
ACCUMULATOR .....	3- 68
MACHINE OPERATIONS AND CONTROLS .....	3- 69
BEFORE STARTING ENGINE .....	3- 69

STARTING ENGINE .....	3- 87
AFTER STARTING ENGINE .....	3- 91
STOPPING THE ENGINE .....	3- 99
MACHINE OPERATION .....	3-100
STEERING THE MACHINE .....	3-104
SWINGING .....	3-106
WORK EQUIPMENT CONTROLS AND OPERATIONS .....	3-107
WORKING MODE .....	3-108
PROHIBITED OPERATIONS .....	3-109
GENERAL OPERATION INFORMATION .....	3-112
TRAVELING ON SLOPES .....	3-114
ESCAPE FROM MUD .....	3-116
RECOMMENDED APPLICATIONS .....	3-117
BUCKET REPLACEMENT .....	3-118
PARKING MACHINE .....	3-120
CHECK AFTER SHUT OFF ENGINE .....	3-122
MACHINE INSPECTION AFTER DAILY WORK .....	3-122
LOCKING .....	3-122
TRANSPORTATION .....	3-123
PRECAUTIONS FOR TRANSPORTATION .....	3-123
LIFTING MACHINE .....	3-123
SHIPPING MACHINE INFORMATION .....	3-124
TRANSPORTATION POSTURE .....	3-125
COLD WEATHER OPERATION .....	3-132
COLD WEATHER OPERATION INFORMATION .....	3-132
AFTER DAILY WORK COMPLETION .....	3-134
AFTER COLD WEATHER SEASON .....	3-134
LONG TERM STORAGE .....	3-135
BEFORE STORAGE .....	3-135
DURING STORAGE .....	3-135
AFTER STORAGE .....	3-135
STARTING MACHINE AFTER LONG-TERM STORAGE .....	3-136
TROUBLES AND ACTIONS .....	3-137
RUNNING OUT OF FUEL .....	3-137
PHENOMENA THAT ARE NOT FAILURES .....	3-137
TOWING THE MACHINE .....	3-138
SEVERE JOB CONDITION .....	3-138
DISCHARGED BATTERY .....	3-139
OTHER TROUBLE .....	3-143
MAINTENANCE .....	4- 1
MAINTENANCE INFORMATION .....	4- 2
OUTLINE OF SERVICE .....	4- 4
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC .....	4- 4
ELECTRIC SYSTEM MAINTENANCE .....	4- 8
WEAR PARTS .....	4- 9
WEAR PARTS LIST .....	4- 9
LUBRICANTS, FUEL AND COOLANT SPECIFICATIONS .....	4- 10
RECOMMENDED BRANDS, RECOMMENDED QUALITY FOR PRODUCTS OTHER THAN KOMATSU GENUINE OIL .....	4- 11
TIGHTENING TORQUE SPECIFICATIONS .....	4- 12