

Shop Manual

HYDRAULIC
EXCAVATOR

PC138USLC-10

SERIAL NUMBERS 40001 and up

KOMATSU

Index (ALL-0310-001-A-00-A)

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-13
Important safety notice	00-13
How to read the shop manual	00-20
Explanation of terms for maintenance standard	00-22
Handling equipment of fuel system devices	00-24
Handling of intake system parts	00-25
Handling of hydraulic equipment	00-26
Method of disconnecting and connecting of push-pull type coupler	00-28
Handling of electrical equipment	00-31
How to read electric wire code	00-39
Precautions when performing operation	00-42
Practical use of KOMTRAX	00-47
Standard tightening torque table	00-48
List of abbreviation	00-54
Conversion table	00-59
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawing	01-3
Working range drawings	01-4
Specifications	01-5
Weight table	01-9
Table of fuel, coolant, and lubricants	01-11
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-3
Engine related parts	10-3
PTO	10-5
Variable flow turbocharger	10-6
EGR system piping drawing	10-10
EGR system circuit diagram	10-12
EGR valve	10-13
EGR cooler	10-15
KCCV layout drawing	10-17
KCCV ventilator	10-19
KDOC muffler	10-21
Cooling system	10-23
Power train	10-25
Power train system	10-25
Swing circle	10-27
Swing machinery	10-28
Undercarriage and frame	10-30
Track frame	10-30
Idler cushion	10-31
Hydraulic system	10-32
Hydraulic component layout	10-32
Valve control	10-34
Hydraulic tank	10-35
CLSS	10-37
Main pump	10-41
Control valve	10-68
Swing motor	10-113
Travel motor	10-125
Work equipment and swing PPC valve	10-136
Travel PPC valve	10-143
Blade PPC valve	10-149

1st-line attachment PPC valve (with EPC valve)	10-151
Solenoid valve	10-159
Attachment circuit selector valve (for low pressure circuit).....	10-165
Attachment circuit selector valve (for high pressure circuit)	10-168
Multi-control valve	10-170
Anti-drop valve for boom.....	10-171
Anti-drop valve for arm	10-175
Center swivel joint.....	10-179
PPC circuit accumulator	10-181
Attachment circuit accumulator (for low pressure circuit).....	10-182
Attachment circuit accumulator (for high pressure circuit)	10-183
Work equipment	10-184
Work equipment.....	10-184
Work equipment shim.....	10-185
Bucket play adjustment shim.....	10-186
Cab and its attachments.....	10-187
Cab mount and cab tipping stopper	10-187
ROPS cab	10-188
Electrical system	10-190
Electrical control system	10-190
Machine monitor system.....	10-222
KOMTRAX system.....	10-243
Sensor	10-260
20 Standard value tables.....	20-1
Table of contents	20-2
Standard service value table.....	20-3
Standard value table for engine	20-3
Standard value table for machine	20-4
Standard value table for electrical system.....	20-17
30 Testing and adjusting	30-1
Table of contents	30-2
Related information on testing and adjusting	30-3
Tools for testing and adjusting	30-3
Sketch of tools for testing and adjusting	30-6
Engine and cooling system.....	30-8
Testing engine speed	30-8
Testing exhaust gas color	30-9
Testing and adjusting valve clearance.....	30-10
Testing compression pressure.....	30-12
Testing blowby pressure	30-15
Testing engine oil pressure	30-16
Testing fuel pressure	30-17
Testing fuel return rate and leakage	30-18
Bleeding air from fuel system	30-21
Testing fuel circuit for leakage	30-23
Handling cylinder cutout mode operation.....	30-24
Handling no-injection cranking operation.....	30-25
Testing and adjusting air conditioner compressor belt tension	30-26
Check fan belt, replace.....	30-27
Check auto-tensioner, replace.....	30-29
Writing compensation values at replacement of injector and engine controller	30-32
Power train.....	30-36
Testing swing circle bearing clearance	30-36
Undercarriage and frame.....	30-37
Testing and adjusting track tension	30-37
Hydraulic system	30-38
Releasing remaining pressure from hydraulic circuit.....	30-38
Testing and adjusting oil pressure in work equipment, swing, and travel circuits.....	30-43
Testing oil pressure of control circuit	30-46