

Shop Manual

HYDRAULIC
EXCAVATOR

PC138USLC-11

SERIAL NUMBERS 50001 and up

KOMATSU

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-18
FOREWORD, SAFETY, BASIC INFORMATION	00-24
HOW TO READ THE SHOP MANUAL.....	00-24
SAFETY NOTICE FOR OPERATION.....	00-26
PRECAUTIONS TO PREVENT FIRE.....	00-34
ACTIONS IF FIRE OCCURS	00-36
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-37
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-38
PRECAUTIONS FOR DEF.....	00-39
STORE AdBlue/DEF	00-40
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-41
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-44
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-50
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-52
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-53
PRACTICAL USE OF KOMTRAX	00-54
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-55
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-59
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-63
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-64
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-66
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-67
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE ..	00-69
HOW TO READ ELECTRICAL WIRE CODE	00-70
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-74
STANDARD TIGHTENING TORQUE TABLE.....	00-77
CONVERSION TABLE	00-84
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING.....	01-9
WORKING RANGE DRAWINGS	01-11
SPECIFICATIONS	01-12
WEIGHT TABLE	01-16
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-18
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-5
UREA SCR SYSTEM.....	10-11
LAYOUT DRAWING OF UREA SCR SYSTEM	10-11
UREA SCR SYSTEM DIAGRAM	10-13
FUNCTION OF UREA SCR SYSTEM.....	10-14
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-31
BOOT-UP SYSTEM.....	10-40
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-40
SYSTEM OPERATING LAMP SYSTEM	10-41
BATTERY DISCONNECT SWITCH	10-42
ENGINE SYSTEM	10-43
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-43
ENGINE CONTROL SYSTEM	10-45
AUTO-DECELERATION SYSTEM.....	10-48
ENGINE AUTOMATIC WARM-UP SYSTEM.....	10-50
OVERHEAT PREVENTION SYSTEM.....	10-52