

Operation & Maintenance Manual

KOMATSU

PC05-6, PC10-6

PC15-2

HYDRAULIC EXCAVATOR

SERIAL NUMBERS

PC05- 6006

PC10-21446 and up

PC15- 2809

CONTENTS

OPERATION		MAINTENANCE	
GENERAL LOCATIONS AND SPECIFICATIONS	4	PERIODIC MAINTENANCE	59
INSTRUMENTS AND CONTROLS	6	MAINTENANCE TABLE	60
OIL FILLER AND LEVEL GAUGE POSITIONS	22	INITIAL 50 HOURS SERVICE	63
CHECK BEFORE STARTING	24	EVERY 50 HOURS SERVICE	63
OPERATING YOUR MACHINE	28	EVERY 100 HOURS SERVICE	66
REPLACEMENT OF BUCKET	50	INITIAL 250 HOURS SERVICE	68
METHOD OF LIFTING THE MACHINE	52	EVERY 250 HOURS SERVICE	69
COLD WEATHER OPERATION	55	EVERY 500 HOURS SERVICE	80
		EVERY 2000 HOURS SERVICE	84
		WHEN REQUIRED	86
		HANDLING RUBBER SHOES	93
		SERVICE METER	98
		MACHINE AND ENGINE SERIAL NUMBERS	99
		FUEL, COOLANT AND LUBRICANTS	100