

Operation & Maintenance Manual

SEAM015102T

PC12R-8 PC15R-8

HYDRAULIC EXCAVATOR

SERIAL NUMBERS PC12R-10001 and up
PC15R-10001

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU

5. CONTENTS

1. Foreword	0- 1
2. Safety information	0- 4
3. Introduction	0- 5
4. Location of plates, table to enter serial No. and distributor	0- 6

SAFETY

6. General precautions	1- 2
7. Precautions during operation	1- 7
7.1 Before starting engine	1- 7
7.2 After starting engine	1- 9
7.3 Transportation	1-16
7.4 Battery	1-17
7.5 Towing	1-19
8. Precautions for maintenance	1-20
8.1 Before carrying out maintenance	1-20
8.2 During maintenance	1-24
9. Position for attaching safety labels	1-29

OPERATION

10. General view	2- 2
10.1 General view of machine	2- 2
10.2 General view of controls and gauges	2- 3
11. Explanation of components	2- 4
11.1 Machine monitor	2- 4
11.2 Switches	2- 7
11.3 Control levers and pedals	2- 9
11.4 Engine food	2-13
11.5 Operator's seat	2-14
11.6 Manual storage space • Tool box	2-14
11.7 Battery hook	2-14
11.8 Front window (for machine equipped with cab (option))	2-15
11.9 Door lock (for machine equipped with cab (option))	2-17
11.10 Hammer for emergency escape (for machine equipped with cab (option))	2-18
11.11 Cap, cover with lock	2-18
11.12 Fuse	2-20
11.13 Fusible link	2-20

12. Operation	2-21
12.1 Check before starting engine	2-21
12.2 Starting engine	2-28
12.3 Operations and checks after starting engine	2-31
12.4 Moving machine off	2-33
12.5 Steering machine	2-36
12.6 Stopping machine	2-38
12.7 Swinging	2-39
12.8 Operation of work equipment	2-40
12.9 Prohibitions for operation	2-41
12.10 Precautions for operation	2-44
12.11 Precautions when traveling up or down hills	2-45
12.12 How to escape from mud	2-47
12.13 Work possible using hydraulic excavator	2-48
12.14 Replacement of bucket	2-50
12.15 Parking machine	2-51
12.16 Check after finishing work	2-52
12.17 Stopping engine	2-52
12.18 Check after stopping engine	2-53
12.19 Locking	2-53
12.20 Handling rubber shoes (rubber shoes only)	2-54
13. Transportation	2-60
13.1 Loading, unloading work	2-60
13.2 Precautions for loading	2-62
13.3 Precautions for transportation	2-62
13.4 Method of lifting machine	2-63
14. Cold weather operation	2-64
14.1 Precautions for low temperature	2-64
14.2 Precautions after completion of work	2-66
14.3 After cold weather	2-66
15. Long-term storage	2-67
15.1 Before storage	2-67
15.2 During storage	2-68
15.3 After storage	2-68
16. Troubleshooting	2-69
16.1 Phenomena that are not failures	2-69
16.2 Method of towing machine	2-69
16.3 If battery is discharged	2-70
16.4 Other trouble	2-75