

Operation & Maintenance Manual

UENAM00773

PC160LC-8

PC190LC-8

PC190NLC-8

HYDRAULIC EXCAVATOR

SERIAL NUMBER PC160LC-8 - K50001 and up
 PC190LC-8 - K50001 and up
 PC190NLC-8 - K50001 and up



WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept inside the cab for reference and periodically reviewed by all personnel who will come into contact with the machine.

ORIGINAL INSTRUCTIONS

KOMATSU

CONTENTS

FOREWORD

FOREWORD	1-2
SAFETY INFORMATION	1-3
NOISE (PC160LC).....	1-5
NOISE (PC190LC,190NLC).....	1-6
Vibration levels for PC160 and PC190-8	1-6
Guide to Reduce Vibration Levels on Machine.....	1-7
INTRODUCTION	1-8
DEMOLITION WORK	1-8
DIRECTIONS OF MACHINE	1-9
OPERATOR PROTECTIVE STRUCTURE.....	1-9
VISIBILITY FOR OPERATOR	1-9
BREAKING-IN THE NEW MACHINE	1-10
PRODUCT INFORMATION	1-11
PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE	1-11
EPA REGULATIONS, ENGINE NUMBER PLATE	1-11
SERVICE METER LOCATION	1-12
TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR	1-13
MACHINE SERIAL PLATE	1-14
SERIAL PLATE (WHERE FITTED)	1-14
DECLARATION OF CONFORMITY	1-15

SAFETY

SAFETY	2-2
SAFETY LABELS	2-4
LOCATION OF SAFETY LABELS	2-4
SAFETY LABELS	2-5
SAFETY INFORMATION	2-16
SAFETY RULES.....	2-16
IF PROBLEMS ARE FOUND	2-16
WORKING WEAR AND PERSONAL PROTECTIVE ITEMS	2-16
FIRE EXTINGUISHER AND FIRST AID KIT	2-16
SAFETY EQUIPMENT	2-17
KEEP MACHINE CLEAN.....	2-17
KEEP OPERATOR'S COMPARTMENT CLEAN.....	2-17
LEAVING OPERATOR'S SEAT WITH LOCK	2-17
HANDRAILS AND STEPS.....	2-18

CONTENTS

MOUNTING AND DISMOUNTING	2-19
LIFTING OF PERSONNEL PROHIBITED	2-19
NO PERSONS ON ATTACHMENTS	2-19
DO NOT GET CAUGHT IN ARTICULATED PORTION	2-19
BURN PREVENTION	2-19
ACTION IF FIRE OCCURS	2-21
WINDSHIELD WASHER FLUID	2-21
PRECAUTIONS RELATED TO PROTECTIVE STRUCTURES.....	2-21
FALLING OBJECTS, FLYING OBJECTS AND INTRUDING OBJECTS PREVENTION	2-22
ACTIONS IN THE EVENT OF DAMAGE TO SAFETY STRUCTURES	2-23
ATTACHMENT INSTALLATION.....	2-23
ATTACHMENT COMBINATIONS	2-23
CAB WINDOW GLASSES.....	2-23
UNAUTHORIZED MODIFICATIONS.....	2-23
SAFETY AT JOBSITE	2-24
WORKING ON LOOSE GROUND	2-24
DISTANCE TO HIGH VOLTAGE CABLES	2-24
ENSURE GOOD VISIBILITY	2-25
VENTILATION FOR ENCLOSED AREA	2-26
SIGNALMAN'S SIGNAL AND SIGNS.....	2-26
EMERGENCY EXIT FROM OPERATOR'S CAB	2-26
ELECTROMAGNETIC INTERFERENCE	2-26
ASBESTOS DUST HAZARD PREVENTION	2-27
SAFETY MACHINE OPERATION	2-28
STARTING ENGINE	2-28
CHECKS BEFORE STARTING ENGINE	2-28
SAFETY RULES FOR STARTING ENGINE	2-29
STARTING ENGINE IN COLD WEATHER	2-29
OPERATION.....	2-30
CHECKS BEFORE OPERATION.....	2-30
SAFETY RULES FOR CHANGING MACHINE DIRECTIONS	2-30
SAFETY RULES FOR TRAVELLING.....	2-31
TRAVELLING ON SLOPES.....	2-32
OPERATIONS ON SLOPES	2-33
PROHIBITED OPERATIONS	2-33
OPERATIONS ON SNOW.....	2-35
PARKING MACHINE	2-35
TRANSPORTATION.....	2-36
LOADING AND UNLOADING.....	2-36
SHIPPING THE MACHINE	2-37
TURN THE BATTERY DISCONNECT SWITCH TO THE OFF POSITION.....	2-37
BATTERY	2-38
STARTING ENGINE WITH BOOSTER CABLES	2-39
TOWING	2-40
SAFETY RULES FOR TOWING	2-40
LIFTING OBJECTS WITH BUCKET	2-41
SAFETY RULES FOR LIFTING OBJECTS.....	2-41