

Shop Manual

HYDRAULIC
EXCAVATOR

PC18MR-3

SERIAL NUMBERS 20001 and up

KOMATSU

Table of contents

00 Index and foreword	
100 Index	SEN04308-04
Composition of shop manual.....	2
Table of contents	4
200 Foreword and general information	SEN04309-00
Safety notice	2
How to read the shop manual	7
Explanation of terms for maintenance standard.....	9
Handling of electric equipment and hydraulic component.....	11
Handling of connectors newly used for engines.....	20
How to read electric wire code	23
Precautions when carrying out operation.....	26
Method of disassembling and connecting push-pull type coupler.....	29
Standard tightening torque table	32
Conversion table	36
01 Specification	
100 Specification and technical data	SEN04311-01
Specification dimension drawing.....	2
Working range drawing	3
Specifications	4
Weight table	7
Table of fuel, coolant and lubricants.....	9
10 Structure, function and maintenance standard	
100 Engine and cooling system	SEN04313-00
PTO.....	2
Cooling system.....	4
200 Power train	SEN04314-01
Power train	2
Swing circle	3
300 Undercarriage and frame	SEN04315-00
Track frame	2
Idler cushion.....	3
Idler	5
Track roller	6
Sprocket	7
Track shoe.....	8
410 Hydraulic system, Part 1	SEN04316-00
Hydraulic components layout drawing	2
Hydraulic tank	3
Center swivel joint.....	4
Travel motor	5
Hydraulic cylinder.....	14
Solenoid valve.....	18
Variable gauge valve	21
Multi-control valve (If equipped)	22
420 Hydraulic system, Part 2	SEN04317-00
Hydraulic pump	2
Control valve	8