## **Shop Manual**

## PC200, 200LC-2 PC220, 200LC-2

HYDRAULIC EXCAVATOR

SERIAL NUMBERS PC200, 200LC-2 15001 and up PC220, 220LC-2 11001 and up

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2011 Komatsu Printed in U.S.A. Komatsu America Corp.

## **CONTENTS**

		No.	of page
01	GENE	TRAL	01-1
10	ENGINE		
	12 13	TESTING AND ADJUSTING	
20	POWI	ER TRAIN	
	21 23 24	STRUCTURE AND FUNCTION	23-1
30	UNDERCARRIAGE		
	31 33 34	STRUCTURE AND FUNCTION	33-1
60	HYDR	AULIC SYSTEM	
	61 62 63 64	STRUCTURE AND FUNCTION  TESTING AND ADJUSTING  DISASSEMBLY AND ASSEMBLY  MAINTENANCE STANDARD	62-1 63-1
70	WORK EQUIPMENT		
		STRUCTURE AND FUNCTION	73-1
90	OTHE	:RS	
	90 93	ELECTRICAL SYSTEM	