

## MANUAL

SHC

## KOMATSU PC200,200LC-5 C200, 200LC-5 MIGHTY C220, 220L

MACHINE MODEL

PC200-5

PC PC

PC: PC: PC: SERIAL NO.

45001 and up

	A70001 and up
200-5 MIGHTY	58019 and up
200LC-5	45001 and up
	A70001 and up
200LC-5 MIGHTY	58019 and up
220-5	35001 and up
220LC-5	35001 and up
	A70001 and up
	•

- Open Serial Numbers references (i.e. 45001 and up) apply to all machine Serial Numbers listed above. ٠ Closed Serial Numbers references (i.e. 45001-45003) apply only to those machine Serial Numbers.
- This shop manual may contain attachments and optional equipment that are not available in your area. ۰ Please consult your local Komatsu distributor for those items you may require. Material and specification are subject to change without notice.
- PC200, 200LC-5, MIGHTY mount the S6D95L engine; PC220, 220LC-5 mount the SA6D95L engine. For details of the engine, see the 95 Series Engine Shop Manual.

## **CONTENTS**

	No.	
10	STRUCTURE AND FUNCTION	10-1
20	TESTING AND ADJUSTING	20-1
30	DISASSEMBLY AND ASSEMBLY	30-1
40	MAINTENANCE STANDARD	40-1

. - .

Not to be reproduced in whole or in part without the prior written permission of **KOMATSU**, Tokyo, Japan.