

Operation & Maintenance Manual

PC200-8

PC200LC-8

HYDRAULIC EXCAVATOR

SERIAL NUMBERS **PC200-8** **C60001** and up
 PC200LC-8 **C60001** and up

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2009 Komatsu
Printed in U.S.A.
Komatsu America Corp.

August 2009

CONTENTS

FOREWORD	1- 1
FOREWORD	1- 2
SAFETY INFORMATION	1- 5
INTRODUCTION	1- 7
DIRECTIONS OF MACHINE	1- 7
BREAKING-IN THE NEW MACHINE	1- 7
PRODUCT INFORMATION	1- 8
PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE	1- 8
EPA REGULATIONS, ENGINE NUMBER PLATE	1- 8
SERVICE METER LOCATION	1- 9
YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR	1- 9
CONTENTS	1- 10
SAFETY	2- 1
SAFETY	2- 2
SAFETY LABELS	2- 4
LOCATION OF SAFETY LABELS	2- 5
SAFETY LABELS	2- 6
GENERAL PRECAUTIONS	2- 12
SAFETY MACHINE OPERATION	2- 21
STARTING ENGINE	2- 21
OPERATION	2- 23
TRANSPORTATION	2- 29
BATTERY	2- 30
TOWING	2- 32
LIFTING OBJECTS WITH BUCKET	2- 33
SAFETY MAINTENANCE INFORMATION	2- 34
OPERATION	3- 1
MACHINE VIEW ILLUSTRATIONS	3- 2
OVERALL MACHINE VIEW	3- 2
CONTROLS AND GAUGES	3- 3
DETAILED CONTROLS AND GAUGES	3- 5
MONITORING SYSTEM	3- 5
SWITCHES	3- 71
CONTROL LEVERS AND PEDALS	3- 76
SUN ROOF	3- 79
WINDSHIELD	3- 79
EMERGENCY ESCAPE HAMMER	3- 85
DOOR LOCK	3- 85
CAP WITH LOCK	3- 86
DRINK BOX	3- 88
MAGAZINE BOX	3- 88
ASHTRAY	3- 88
AIR CONDITIONER CONTROLS	3- 89
RADIO	3-102
AUXILIARY ELECTRIC POWER	3-107
FUSE	3-108
FUSIBLE LINK	3-109
CONTROLLER	3-109
TOOL BOX	3-109

GREASE PUMP HOLDER	3-109
FIRE EXTINGUISHER	3-110
MACHINE OPERATIONS AND CONTROLS	3-111
BEFORE STARTING ENGINE	3-111
STARTING ENGINE	3-130
AFTER STARTING ENGINE	3-133
STOPPING THE ENGINE	3-144
MACHINE OPERATION	3-145
STEERING THE MACHINE	3-149
SWINGING	3-151
WORK EQUIPMENT CONTROLS AND OPERATIONS	3-152
WORKING MODE	3-154
PROHIBITED OPERATIONS	3-156
GENERAL OPERATION INFORMATION	3-158
TRAVELING ON SLOPES	3-160
ESCAPE FROM MUD	3-162
RECOMMENDED APPLICATIONS	3-163
BUCKET REPLACEMENT AND INVERSION	3-165
PARKING MACHINE	3-169
MACHINE INSPECTION AFTER DAILY WORK	3-170
LOCKING	3-171
TRANSPORTATION	3-172
TRANSPORTATION PROCEDURE	3-172
LOADING AND UNLOADING WITH TRAILER	3-173
LIFTING MACHINE	3-182
COLD WEATHER OPERATION	3-185
COLD WEATHER OPERATION INFORMATION	3-185
AFTER DAILY WORK COMPLETION	3-187
AFTER COLD WEATHER SEASON	3-187
LONG TERM STORAGE	3-188
BEFORE STORAGE	3-188
DURING STORAGE	3-188
AFTER STORAGE	3-189
STARTING MACHINE AFTER LONG-TERM STORAGE	3-189
TROUBLES AND ACTIONS	3-190
RUNNING OUT OF FUEL	3-190
PHENOMENA THAT ARE NOT FAILURES	3-190
TOWING THE MACHINE	3-191
LIGHTWEIGHT TOWING HOLE	3-192
SEVERE JOB CONDITION	3-192
DISCHARGED BATTERY	3-193
OTHER TROUBLE	3-197
MAINTENANCE	4- 1
MAINTENANCE INFORMATION	4- 2
OUTLINE OF SERVICE	4- 4
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC	4- 4
ELECTRIC SYSTEM MAINTENANCE	4- 7
WEAR PARTS	4- 8
WEAR PARTS LIST	4- 8
RECOMMENDED FUEL, COOLANT, AND LUBRICANT	4- 9