

Operation & Maintenance Manual

HYDRAULIC
EXCAVATOR

PC200-7 **PC200LC-7**
PC220-7 **PC220LC-7**

SERIAL NUMBERS

PC200-250001 and up
PC220- 65001

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU

CONTENTS

FOREWORD

FOREWORD 1-2

SAFETY INFORMATION 1-5

INTRODUCTION 1-7

 DIRECTIONS OF MACHINE 1-7

 BREAKING-IN THE NEW MACHINE 1-7

PRODUCT INFORMATION 1-8

 PRODUCT IDENTIFICATION NUMBER (PIN), MACHINE SERIAL NO. PLATE 1-8

 ENGINE SERIAL NUMBER PLATE AND ITS LOCATION 1-8

 SERVICE METER LOCATION 1-9

 YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR 1-9

SAFETY

SAFETY INFORMATION 2-2

POSITION FOR ATTACHING SAFETY LABELS 2-4

 POSITION FOR ATTACHING SAFETY LABELS 2-4

 SAFETY LABELS 2-5

SAFETY INFORMATION 2-10

SAFETY MACHINE OPERATION 2-19

 STARTING ENGINE 2-19

 OPERATION 2-21

 TRANSPORTATION 2-27

 BATTERY 2-28

 TOWING 2-30

 LIFTING OBJECTS WITH BUCKET 2-31

SAFETY MAINTENANCE INFORMATION 2-32

OPERATION

GENERAL VIEW 3-2

 GENERAL VIEW OF MACHINE 3-2

 GENERAL VIEW CONTROLS AND GAUGES 3-3

EXPLANATION OF COMPONENTS 3-4

 MACHINE MONITOR 3-4

 BASIC CHECK ITEMS 3-7

 SWITCHES 3-28

CONTROL LEVERS, PEDALS 3-33

CEILING WINDOW 3-36

FRONT WINDOW 3-37

EMERGENCY EXIT FROM OPERATOR'S CAB 3-42

DOOR LOCK 3-42

CAP, COVER WITH LOCK 3-43

HOT AND COOL BOX 3-44

MAGAZINE BOX 3-44

ASHTRAY 3-44

AIR CONDITIONER CONTROLS 3-45

RADIO 3-59

FUSE 3-64

FUSIBLELINK 3-65

CONTROLLER (COMPUTER) 3-66

TOOLBOX 3-66

GREASE GUN HOLDER 3-66

HANDLING ACCUMULATOR 3-67

MACHINE OPERATIONS AND CONTROLS 3-68

 BEFORE STARTING ENGINE 3-68

 STARTING ENGINE 3-83

 AFTER STARTING ENGINE 3-87

 IN COLD WEATHER AREAS 3-90

 STOPPING THE ENGINE 3-95

 MACHINE OPERATION 3-96

 STEERING THE MACHINE 3-100

 SWINGING 3-102

 WORK EQUIPMENT CONTROLS AND OPERATIONS 3-103

 OPERATING WORKING MODE 3-105

 PROHIBITED OPERATIONS 3-106

 GENERAL OPERATION INFORMATION 3-108

 TRAVELING ON SLOPES 3-109

 ESCAPE FROM MUD 3-111

 RECOMMENDED APPLICATIONS 3-112

 REPLACEMENT AND INVERSION OF BUCKET 3-114

 PARKING MACHINE 3-117

 CHECK AFTER SHUT OFF ENGINE 3-118

 MACHINE INSPECTION AFTER DAILY WORK 3-118

 LOCKING 3-119

TRANSPORTATION 3-120

 TRANSPORTATION PROCEDURE 3-120

 LOADING AND UNLOADING WITH TRAILER 3-121

 LIFTING MACHINE 3-128

COLD WEATHER OPERATION 3-130

 COLD WEATHER OPERATION INFORMATION 3-130

 AFTER DAILY WORK COMPLETION 3-133

 AFTER COLD WEATHER SEASON 3-134