

# Operation & Maintenance Manual

## PC200,200LC-6 PC210LC-6 PC220LC-6 PC250LC-6 HYDRAULIC EXCAVATOR

	<b>PC200,200LC-6</b>	<b>- A83001</b>	
<b>SERIAL NUMBERS</b>	<b>PC210LC-6</b>	<b>- A83001</b>	<b>and up</b>
	<b>PC220LC-6</b>	<b>- A83001</b>	
	<b>PC250LC-6</b>	<b>- A83001</b>	

This material is proprietary to Komatsu America International Company and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America International Company.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or add improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, periodic revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

# 5. CONTENTS

---

1. FORWARD .....	0-1
2. SAFETY INFORMATION .....	0-2
3. INTRODUCTION .....	0-3
3.1 INTENDED USE .....	0-3
3.2 FEATURES .....	0-3
3.3 BREAKING IN A NEW MACHINE .....	0-3
4. LOCATION OF PLATES, TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR .....	0-4
4.1 MACHINE SERIAL NO. PLATE POSITION .....	0-4
4.2 ENGINE SERIAL NO. PLATE POSITION .....	0-4
4.3 TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR .....	0-4
5. CONTENTS .....	0-5
6. GENERAL PRECAUTIONS .....	0-2
7. PRECAUTIONS DURING OPERATION .....	0-9
7.1 BEFORE STARTING ENGINE .....	0-9
7.2 OPERATING MACHINE .....	0-11
7.3 TRANSPORTATION .....	0-19
7.4 BATTERY .....	0-20
7.5 TOWING .....	0-22
7.6 BUCKET WITH HOOK .....	0-23
7.6.1 GENERAL PRECAUTIONS .....	0-23
7.6.2 PRECAUTIONS FOR LIFTING OPERATION .....	0-24
8. PRECAUTIONS FOR MAINTENANCE .....	0-25
8.1 BEFORE CARRYING OUT MAINTENANCE .....	0-25
8.2 DURING MAINTENANCE .....	0-28
9. POSITION FOR ATTACHING SAFETY LABELS .....	0-33
10. GENERAL VIEW .....	2-2
10.1 GENERAL VIEW OF MACHINE .....	2-2
10.2 GENERAL VIEW OF CONTROLS AND GAUGES .....	2-3
11. EXPLANATION OF COMPONENTS .....	2-4
11.1 MACHINE MONITOR .....	2-4
11.1.1 A. BASIC CHECK ITEMS .....	2-4
11.1.2 B. CAUTION ITEMS .....	2-6
11.1.3 C. EMERGENCY STOP ITEMS .....	2-7
11.1.4 D. METER DISPLAY PORTION .....	2-8
11.1.5 E: SWITCHES .....	2-12
11.2 SWITCHES .....	2-15
11.3 CONTROL LEVERS, PEDALS .....	2-19
11.4 CEILING WINDOW .....	2-24
11.5 FRONT WINDOW .....	2-25
11.6 DOOR LOCK .....	2-27
11.7 CAP, COVER WITH LOCK .....	2-28
11.7.1 METHOD OF OPENING AND CLOSING CAP WITH LOCK .....	2-28
11.7.2 METHOD OF OPENING AND CLOSING COVER WITH LOCK .....	2-28
11.8 HOT/COOL BOX .....	2-29
11.9 LUGGAGE BOX .....	2-29
11.10 ASHTRAY .....	2-29
11.11 CAB HEATER .....	2-30
11.12 CAR RADIO .....	2-32

11.12.1 EXPLANATION OF COMPONENTS .....	2-32
11.12.2 LOCATION AND FUNCTION OF CONTROLS .....	2-32
11.12.3 METHOD OF OPERATION .....	2-35
11.12.4 PRECAUTIONS WHEN USING .....	2-36
11.12.5 SPECIFICATIONS .....	2-36
11.13 FUSE .....	2-37
11.14 FUSIBLE LINK .....	2-38
11.15 CONTROLLER .....	2-38
11.16 TOOL BOX .....	2-38
11.17 GREASE PUMP HOLDER .....	2-38
11.18 HANDLING ACCUMULATOR .....	2-39
11.18.1 METHOD OF RELEASING PRESSURE IN CONTROL CIRCUIT ON MACHINE EQUIPPED WITH ACCUMULATOR .....	2-39
<b>12. OPERATION .....</b>	<b>2-40</b>
12.1 CHECK BEFORE STARTING ENGINE .....	2-40
12.1.1 WALK-AROUND CHECK .....	2-40
12.1.2 CHECK BEFORE STARTING .....	2-42
12.1.3 ADJUSTMENT BEFORE OPERATION .....	2-46
12.1.4 OPERATIONS AND CHECKS BEFORE STARTING ENGINE .....	2-48
12.2 STARTING ENGINE .....	2-49
12.2.1 NORMAL STARTING .....	2-49
12.2.2 STARTING IN COLD WEATHER .....	2-50
12.3 OPERATIONS AND CHECKS AFTER STARTING ENGINE .....	2-52
12.3.1 WHEN NORMAL .....	2-52
12.3.2 IN COLD AREAS .....	2-54
12.4 MOVING MACHINE .....	2-57
12.4.1 MOVING MACHINE FORWARD .....	2-57
12.4.2 MOVING MACHINE BACKWARD .....	2-58
12.5 STEERING MACHINE .....	2-60
12.6 STOPPING MACHINE .....	2-62
12.7 SWINGING .....	2-63
12.8 OPERATION OF WORK EQUIPMENT .....	2-64
12.9 HANDLING ACTIVE MODE .....	2-65
12.10 WORKING MODE SELECTION .....	2-67
12.11 PROHIBITIONS FOR OPERATION .....	2-69
12.12 PRECAUTIONS FOR OPERATION .....	2-71
12.13 PRECAUTIONS WHEN TRAVELING UP OR DOWN HILLS .....	2-72
12.14 HOW TO ESCAPE FROM MUD .....	2-74
12.14.1 WHEN ONE SIDE IS STUCK .....	2-74
12.14.2 WHEN BOTH SIDES ARE STUCK .....	2-74
12.15 WORK POSSIBLE USING HYDRAULIC EXCAVATOR .....	2-75
12.15.1 BACKHOE WORK .....	2-75
12.15.2 SHOVEL WORK .....	2-75
12.15.3 DITCHING WORK .....	2-75
12.15.4 LOADING WORK .....	2-75
12.16 REPLACEMENT AND INVERSION OF BUCKET .....	2-76
12.16.1 REPLACEMENT .....	2-76
12.16.2 INVERSION .....	2-77
12.17 PARKING MACHINE .....	2-78
12.18 CHECK AFTER FINISHING WORK .....	2-79
12.19 STOPPING ENGINE .....	2-80
12.20 CHECK AFTER STOPPING ENGINE .....	2-81
12.21 LOCKING AND SECURING MACHINE .....	2-81
<b>13. TRANSPORTATION .....</b>	<b>2-82</b>