

# Shop Manual

# PC210LL-10

## HYDRAULIC EXCAVATOR

**SERIAL NUMBERS**    **PC210LL-10 A52001 and up**

**ENGINE**                **6D107E-2**

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2015 Komatsu  
Printed in U.S.A.  
Komatsu America Corp.

August 2015

**Index** (ALL-0310-001-A-00-A)

|  |        |
|--|--------|
| 00 Index and foreword .....  | 00-1   |
| Index .....  | 00-2   |
| Foreword, safety and general information .....                         | 00-14  |
| Important safety notice .....  | 00-14  |
| How to read the shop manual .....                                      | 00-21  |
| Explanation of terms for maintenance standard .....                    | 00-23  |
| Handling equipment of fuel system devices .....                        | 00-25  |
| Handling of intake system parts .....                                  | 00-26  |
| Handling of hydraulic equipment .....                                  | 00-27  |
| Method of disconnecting and connecting of push-pull type coupler ..... | 00-29  |
| Handling of electrical equipment .....                                 | 00-32  |
| How to read electric wire code .....                                   | 00-40  |
| Precautions when performing operation .....                            | 00-43  |
| Practical use of KOMTRAX .....   | 00-47  |
| Standard tightening torque table .....                                 | 00-48  |
| List of abbreviation .....   | 00-52  |
| Conversion table .....   | 00-57  |
| 01 Specification .....   | 01-1   |
| Table of contents .....  | 01-1   |
| Specifications .....   | 01-2   |
| Specification drawing .....  | 01-2   |
| Working range drawings .....   | 01-5   |
| Specifications .....   | 01-6   |
| Weight table .....   | 01-8   |
| Table of fuel, coolant, and lubricants .....                           | 01-10  |
| 10 Structure and function .....  | 10-1   |
| Table of contents .....  | 10-2   |
| Engine and cooling system .....  | 10-3   |
| Engine related parts .....   | 10-3   |
| KVTG .....   | 10-5   |
| EGR system piping drawing .....  | 10-12  |
| EGR system circuit diagram .....                                       | 10-14  |
| EGR valve .....  | 10-16  |
| EGR cooler .....   | 10-18  |
| KCCV layout drawing .....  | 10-19  |
| KCCV ventilator .....  | 10-21  |
| KDPF .....   | 10-23  |
| Cooling system .....   | 10-27  |
| Power train .....  | 10-29  |
| Power train system .....   | 10-29  |
| Swing circle .....   | 10-31  |
| Swing machinery .....  | 10-32  |
| Final drive .....  | 10-34  |
| Undercarriage and frame .....  | 10-36  |
| Track frame and idler cushion .....                                    | 10-36  |
| Hydraulic system .....   | 10-38  |
| Hydraulic equipment layout drawing .....                               | 10-38  |
| Valve control .....  | 10-40  |
| Hydraulic tank .....   | 10-42  |
| CLSS .....   | 10-44  |
| Main pump .....  | 10-49  |
| Control valve .....  | 10-74  |
| Swing motor .....  | 10-131 |
| Travel motor .....   | 10-144 |
| PPC valve .....  | 10-156 |
| Solenoid valve .....   | 10-176 |

|  |        |
|--|--------|
| Center swivel joint .....  | 10-186 |
| Accumulator .....  | 10-188 |
| Work equipment .....   | 10-189 |
| Work equipment .....   | 10-189 |
| Work equipment shim .....  | 10-190 |
| Bucket play adjustment shim .....  | 10-191 |
| Cab and its attachments .....  | 10-193 |
| Electrical system .....  | 10-194 |
| Electrical control system .....  | 10-194 |
| Machine monitor system .....   | 10-245 |
| KOMTRAX system .....   | 10-267 |
| Sensor .....   | 10-270 |
| 20 Standard value tables .....   | 20-1   |
| Table of contents .....  | 20-2   |
| Standard service value table .....   | 20-3   |
| Standard value table for engine .....  | 20-3   |
| Standard value table for machine .....   | 20-5   |
| Standard value table for electrical system .....                                       | 20-18  |
| 30 Testing and adjusting .....   | 30-1   |
| Table of contents .....  | 30-2   |
| General information on testing and adjusting .....                                     | 30-3   |
| Tools for testing and adjusting .....  | 30-3   |
| Sketch of tools for testing and adjusting .....  | 30-7   |
| Engine and cooling system .....  | 30-8   |
| Testing engine speed .....   | 30-8   |
| Testing boost pressure .....   | 30-9   |
| Testing exhaust gas color .....  | 30-11  |
| Measuring and adjusting valve clearance .....  | 30-13  |
| Testing compression pressure .....   | 30-16  |
| Testing blowby pressure .....  | 30-20  |
| Testing engine oil pressure .....  | 30-21  |
| Testing EGR valve and KVGT oil pressures .....   | 30-22  |
| Measuring fuel pressure .....  | 30-23  |
| Measuring fuel delivery, return and leakage .....                                      | 30-29  |
| Bleeding air from fuel system .....  | 30-34  |
| Checking fuel circuit for leakage .....  | 30-36  |
| Handling cylinder cutout mode operation .....  | 30-37  |
| Handling no injection cranking operation .....   | 30-38  |
| Checking and adjusting air conditioner compressor belt tension .....                   | 30-39  |
| Replacing fan belt .....   | 30-41  |
| Power train .....  | 30-42  |
| Testing swing circle bearing clearance .....   | 30-42  |
| Undercarriage and frame .....  | 30-43  |
| Testing and adjusting track shoe tension .....   | 30-43  |
| Hydraulic system .....   | 30-44  |
| Releasing remaining pressure from hydraulic circuit .....                              | 30-44  |
| Testing and adjusting oil pressure in work equipment, swing, and travel circuits ..... | 30-45  |
| Testing oil pressure of control circuit .....  | 30-49  |
| Testing and adjusting oil pressure in pump PC control circuit .....                    | 30-52  |
| Testing and adjusting oil pressure in pump LS control circuit .....                    | 30-55  |
| Testing output pressure of solenoid valve .....  | 30-60  |
| Testing PPC valve output pressure .....  | 30-64  |
| Adjusting play of work equipment and swing PPC valves .....                            | 30-66  |
| Testing pump swash plate sensor .....  | 30-67  |
| Isolating the parts causing hydraulic drift in work equipment .....                    | 30-68  |
| Testing oil leakage .....  | 30-69  |