

SHOP MANUAL

KOMATSU

**PC200,210-3
PC220,240-3**

MACHINE MODEL

SERIAL No.

PC200,200LC-3

20001 and up

PC210,210LC-3K

K10001 and up

PC220,220LC-3

20001 and up

PC240,240LC,240NLC-3

10001 and up

PC240,240LC,240NLC-3K

K10001 and up

NOTE:

Please correct the information regarding the applicability of pages 11-1 and following as follows:

Present	Revised
PC200-3 21464 and up	<ul style="list-style-type: none">• PC200-3 21464 and up• PC210-3
PC220-3 26365 and up	<ul style="list-style-type: none">• PC220-3 26365 and up• PC240-3

CONTENTS

	No. of page
01 GENERAL	01-1
10 ENGINE	
11 STRUCTURE AND FUNCTION	11-1
12 TESTING AND ADJUSTING	12-1
13 DISASSEMBLY AND ASSEMBLY	13-1
20 POWER TRAIN	
21 STRUCTURE AND FUNCTION	21-1
22 TESTING AND ADJUSTING	22-1
23 DISASSEMBLY AND ASSEMBLY	23-1
24 MAINTENANCE STANDARD	24-1
30 UNDERCARRIAGE	
31 STRUCTURE AND FUNCTION	31-1
33 DISASSEMBLY AND ASSEMBLY	33-1
34 MAINTENANCE STANDARD	34-1
60 HYDRAULIC SYSTEM	
61 STRUCTURE AND FUNCTION	61-1
62 TESTING AND ADJUSTING	62-1
63 DISASSEMBLY AND ASSEMBLY	63-1
64 MAINTENANCE STANDARD	64-1
80 ELECTRIC AND ELECTRONIC SYSTEM	
81 STRUCTURE AND FUNCTION	81-1
82 TESTING AND ADJUSTING	82-1
90 OTHERS	
93 DISASSEMBLY AND ASSEMBLY	93-1