

# Operation & Maintenance Manual

SEAMA2050503

## **PC200-5, 200LC-5 PC200-5 MIGHTY, PC200LC-5 MIGHTY, PC220-5, 220LC-5 HYDRAULIC EXCAVATOR**

SERIAL NUMBERS	PC200-5, PC200LC-5	:58019	and up
	PC200-5, PC200LC-5	:A70001	
	PC200-5 MIGHTY	:58019	
	PC200LC-5 MIGHTY	:58019	
	PC220-5, PC220LC-5	:58019	
	PC220LC-5	:A70001	

# **KOMATSU**

# CONTENTS

## OPERATION

GENERAL LOCATIONS AND SPECIFICATIONS .....	4
INSTRUMENTS AND CONTROLS .....	6
METHOD OF USING MODE SELECTOR SWITCHES .....	46
CHECK BEFORE STARTING .....	50
OPERATING YOUR MACHINE .....	56
INVERSION AND REPLACEMENT OF BUCKET .....	80
HANDLING THE TRAPEZOIDAL BUCKET (EXCEPT PC200, 200LC-5 MIGHTY) .....	82
USING THE EXTENSION ARM (EXCEPT PC200, 200LC-5 MIGHTY) .....	84
HANDLING THE CLAMSHELL BUCKET (EXCEPT PC200, 200LC-5 MIGHTY) .....	84
SELECTION OF TRACK SHOES (EXCEPT PC200, 200LC-5 MIGHTY) .....	86
HANDLING RUBBER PAD SHOE (EXCEPT PC200, 200LC-5 MIGHTY) .....	88
SELECTION OF BUCKET TEETH .....	92
INSTALLATION OF OPTIONAL ELECTRICAL EQUIPMENT .....	94
COLD WEATHER OPERATION .....	98

## MAINTENANCE

PERIODIC MAINTENANCE .....	107
BLEEDING AIR FROM CIRCUIT .....	108
PERIODICAL REPLACEMENT OF SAFETY PARTS .....	112
MAINTENANCE TABLE .....	116
OIL FILLER AND LEVEL GAUGE POSITIONS .....	120
EVERY 100 HOURS SERVICE .....	122
EVERY 250 HOURS SERVICE .....	128
EVERY 500 HOURS SERVICE .....	134
EVERY 1000 HOURS SERVICE .....	138
EVERY 2000 HOURS SERVICE .....	142
EVERY 4000 HOURS SERVICE .....	147
WHEN REQUIRED .....	148
ADJUSTMENT .....	164
TROUBLE SHOOTING GUIDE .....	166
SERVICE METER .....	178
MACHINE AND ENGINE SERIAL NUMBERS .....	180
FUEL, COOLANT AND LUBRICANTS .....	182
 PC200, 200LC-5 MIGHTY (METHOD FOR HANDLING THE ATTACHMENTS) .....	 185