

Operation & Maintenance Manual

HYDRAULIC
EXCAVATOR

PC200-7 **PC200LC-7**
PC220-7 **PC220LC-7**

SERIAL NUMBERS

PC200-250001 and up
PC220- 65001

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU

CONTENTS

FOREWORD

FOREWORD	1-2
SAFETY INFORMATION	1-5
INTRODUCTION	1-7
DIRECTIONS OF MACHINE	1-7
BREAKING-IN THE NEW MACHINE	1-7
PRODUCT INFORMATION	1-8
PRODUCT IDENTIFICATION NUMBER (PIN), MACHINE SERIAL NO. PLATE	1-8
ENGINE SERIAL NUMBER PLATE AND ITS LOCATION	1-8
SERVICE METER LOCATION	1-9
YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR	1-9

SAFETY

SAFETY INFORMATION	2-2
POSITION FOR ATTACHING SAFETY LABELS	2-4
POSITION FOR ATTACHING SAFETY LABELS	2-4
SAFETY LABELS	2-5
SAFETY INFORMATION	2-10
SAFETY MACHINE OPERATION	2-19
STARTING ENGINE	2-19
OPERATION	2-21
TRANSPORTATION	2-27
BATTERY	2-28
TOWING	2-30
LIFTING OBJECTS WITH BUCKET	2-31
SAFETY MAINTENANCE INFORMATION	2-32

OPERATION

GENERAL VIEW	3-2
GENERAL VIEW OF MACHINE	3-2
GENERAL VIEW CONTROLS AND GAUGES	3-3
EXPLANATION OF COMPONENTS	3-4
MACHINE MONITOR	3-4
BASIC CHECK ITEMS	3-7
SWITCHES	3-28

CONTROL LEVERS, PEDALS	3-33
CEILING WINDOW	3-36
FRONT WINDOW	3-37
EMERGENCY EXIT FROM OPERATOR'S CAB	3-42
DOOR LOCK	3-42
CAP, COVER WITH LOCK	3-43
HOT AND COOL BOX	3-44
MAGAZINE BOX	3-44
ASHTRAY	3-44
AIR CONDITIONER CONTROLS	3-45
RADIO	3-59
FUSE	3-64
FUSIBLELINK	3-65
CONTROLLER (COMPUTER)	3-66
TOOLBOX	3-66
GREASE GUN HOLDER	3-66
HANDLING ACCUMULATOR	3-67
MACHINE OPERATIONS AND CONTROLS	3-68
BEFORE STARTING ENGINE	3-68
STARTING ENGINE	3-83
AFTER STARTING ENGINE	3-87
IN COLD WEATHER AREAS	3-90
STOPPING THE ENGINE	3-95
MACHINE OPERATION	3-96
STEERING THE MACHINE	3-100
SWINGING	3-102
WORK EQUIPMENT CONTROLS AND OPERATIONS	3-103
OPERATING WORKING MODE	3-105
PROHIBITED OPERATIONS	3-106
GENERAL OPERATION INFORMATION	3-108
TRAVELING ON SLOPES	3-109
ESCAPE FROM MUD	3-111
RECOMMENDED APPLICATIONS	3-112
REPLACEMENT AND INVERSION OF BUCKET	3-114
PARKING MACHINE	3-117
CHECK AFTER SHUT OFF ENGINE	3-118
MACHINE INSPECTION AFTER DAILY WORK	3-118
LOCKING	3-119
TRANSPORTATION	3-120
TRANSPORTATION PROCEDURE	3-120
LOADING AND UNLOADING WITH TRAILER	3-121
LIFTING MACHINE	3-128
COLD WEATHER OPERATION	3-130
COLD WEATHER OPERATION INFORMATION	3-130
AFTER DAILY WORK COMPLETION	3-133
AFTER COLD WEATHER SEASON	3-134