

Operation & Maintenance Manual

PC200LC-8

PC220LC-8

HYDRAULIC EXCAVATOR

SERIAL NUMBERS PC200LC-8 A88001 and up
PC220LC-8 A88001 and up

ENGINE 6D107E-1

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2016 Komatsu
Printed in U.S.A.
Komatsu America Corp.

TABLE OF CONTENTS

INTRODUCTION

FORWARD 0-2

SAFETY INFORMATION 0-3

INTRODUCTION 0-5

 Directions of Machine 0-5

 Visibility from Operator's Seat 0-5

 Breaking-in the New Machine 0-6

 Product Information 0-7

 Product Identification Number (Pin) / Machine Serial No. Plate 0-7

 EPA* Regulations, Engine Number Plate 0-7

 Service Meter Location 0-8

 Your Machine Serial Numbers and Distributor 0-8

TABLE OF CONTENTS 0-9

SAFETY

SAFETY LABELS 1-2

 Location of Safety Labels 1-2

 Safety Labels 1-4

SAFETY INFORMATION 1-10

 Understanding the Machine 1-10

 Precautions Regarding Safety-related Equipment 1-10

 Safety Rules 1-10

 If Problems Are Found 1-10

 Clothing and Personal Protective Items 1-11

 Fire Extinguisher and First Aid Kit 1-11

 Safety Equipment 1-11

 Keep Machine Clean 1-11

 Keep Operator's Compartment Clean 1-12

 Leaving Operator's Seat with Lock 1-12

 Handrails and Steps 1-13

 Mounting and Dismounting 1-13

 No Persons on Attachments 1-13

 Do Not Get Caught in Work Equipment 1-14

 Burn Prevention 1-14

 Hot coolant 1-14

 Hot oil 1-14

 Fire Prevention and Explosion Prevention 1-15

 Action if Fire Occurs 1-15

 Windshield Washer Fluid 1-16

 Falling Objects, Flying Objects and Intruding Objects Prevention 1-16

 Attachment Installation 1-16

 Attachment Combinations 1-16

 Cab Window Glasses 1-16

 Unauthorized Modifications 1-17

 Safety at Jobsite 1-17

INTRODUCTION

Working On Loose Ground	1-17
Distance to High Voltage Cables	1-17
Ensure Good Visibility	1-18
Ventilation for Enclosed Area	1-18
Signalman's Signal and Signs	1-18
Emergency Exit from Operator's Cab	1-19
Asbestos Dust Hazard Prevention	1-19
SAFETY MACHINE OPERATION	1-20
Starting Engine	1-20
Checks Before Starting Engine	1-20
Safety Rules for Starting Engine	1-21
Starting Engine in Cold Weather	1-21
Operation	1-22
Checks Before Operation	1-22
Safety Rules for Changing Machine Directions	1-22
Safety Rules for Traveling	1-23
Traveling on Slopes	1-24
Operations on Slopes	1-25
Prohibited Operations	1-25
Operations on Snow	1-27
Parking Machine	1-27
TRANSPORTATION	1-28
Loading and Unloading	1-28
Shipping the Machine	1-28
BATTERY	1-29
Battery Hazard Prevention	1-29
Starting Engine with Booster Cables	1-30
TOWING	1-31
Safety Rules for Towing	1-31
LIFTING OBJECTS WITH BUCKET	1-32
Safety Rules for Lifting Objects	1-32
SAFETY MAINTENANCE INFORMATION	1-33
Warning Tag	1-33
Keep Work Place Clean and Tidy	1-33
Appoint Leader When Working With Others	1-33
Precautions When Working at High Places	1-33
Stop Engine Before Carrying Out Maintenance	1-34
Two Workers for Maintenance When Engine Is Running	1-35
Proper Tools	1-35
Accumulator	1-35
Handling Gas Spring	1-36
Precautions when using	1-36
Precautions when discarding	1-36
Personnel	1-36
Attachments	1-37
Work Under the Machine	1-37
Noise	1-37
When using Hammer	1-37
Welding	1-38