

SHOP MANUAL

KOMATSU

PC200, 200LC-6 PC210, 210LC-6 PC220, 220LC-6 PC230, 230LC-6

MACHINE MODEL	SERIAL NUMBER
PC200, 200LC-6 STD	96514 and up
PC200, 200LC-6 HYPER GX	96514 and up
PC210, 210LC-6 STD	30980 and up
PC220, 220LC-6 STD	52852 and up
PC230, 230LC-6 STD	10177 and up

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.
- PC200, 210-6 mount the S6D102-1 engine.
PC220, 230-6 mount the SA6D102-1 engine.
For details of the engine, see the 102 Series Engine Shop Manual.

CONTENTS

	No. of page
01 GENERAL	01-1
10 STRUCTURE AND FUNCTION	10-1
20 TESTING AND ADJUSTING	20-1
30 DISASSEMBLY AND ASSEMBLY	30-1
40 MAINTENANCE STANDARD	40-1
90 OTHERS	90-1

020Y06