

Operation & Maintenance Manual

UEAM004912

PC210-8, PC210LC-8

PC210NLC-8

PC230NHD-8

PC240LC-8

PC240NLC-8

HYDRAULIC EXCAVATOR

SERIAL NUMBER

PC210, PC210LC-8

- K51095 and up

PC210NLC-8

- K51095 and up

PC230NHD-8

- K50114 and up

PC240LC-8

- K50304 and up

PC240NLC-8

- K50304 and up



WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept inside the cab for reference and periodically reviewed by all personnel who will come into contact with the machine.

ORIGINAL INSTRUCTIONS

KOMATSU

CONTENTS

FOREWORD

FOREWORD	1-4
SAFETY INFORMATION	1-5
NOISE (PC210,210LC,210NLC, PC230NHD).....	1-7
NOISE (PC240LC,240NLC).....	1-8
VIBRATION LEVELS.....	1-9
GUIDE TO REDUCE VIBRATION LEVELS ON MACHINE.....	1-9
INTRODUCTION	1-11
DIRECTIONS OF MACHINE.....	1-11
OPERATOR PROTECTIVE STRUCTURE.....	1-11
VISIBILITY FOR OPERATOR.....	1-11
BREAKING-IN THE NEW MACHINE.....	1-12
PRODUCT INFORMATION	1-13
PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE.....	1-13
ENGINE SERIAL NUMBER PLATE AND ITS LOCATION.....	1-13
SERVICE METER LOCATION.....	1-14
TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR.....	1-14
MACHINE SERIAL PLATES.....	1-15
SERIAL PLATE (WHERE FITTED).....	1-15
DECLARATION OF CONFORMITY.....	1-16

SAFETY

SAFETY INFORMATION	2-2
SAFETY LABELS	2-4
LOCATION OF SAFETY LABELS.....	2-4
SAFETY LABELS.....	2-5
SAFETY INFORMATION	2-16
SAFETY RULES.....	2-16
IF PROBLEMS ARE FOUND.....	2-16
WORKING WEAR AND PERSONAL PROTECTIVE ITEMS.....	2-16
FIRE EXTINGUISHER AND FIRST AID KIT.....	2-16
SAFETY EQUIPMENT.....	2-17
KEEP MACHINE CLEAN.....	2-17
KEEP OPERATOR'S COMPARTMENT CLEAN.....	2-17
LEAVING OPERATOR'S SEAT WITH LOCK.....	2-17
HANDRAILS AND STEPS.....	2-18
MOUNTING AND DISMOUNTING.....	2-19
LIFTING OF PERSONNEL PROHIBITED.....	2-19

CONTENTS

NO PERSONS ON ATTACHMENTS	2-19
DO NOT GET CAUGHT IN ARTICULATED PORTION	2-19
BURN PREVENTION	2-19
ACTION IF FIRE OCCURS	2-21
WINDSHIELD WASHER FLUID	2-21
PRECAUTIONS RELATED TO PROTECTIVE STRUCTURES.....	2-21
FALLING OBJECTS, FLYING OBJECTS AND INTRUDING OBJECTS PREVENTION	2-22
ACTIONS IN THE EVENT OF DAMAGE TO SAFETY STRUCTURES	2-23
ATTACHMENT INSTALLATION.....	2-23
ATTACHMENT COMBINATIONS	2-23
CAB WINDOW GLASSES.....	2-23
UNAUTHORIZED MODIFICATIONS.....	2-23
SAFETY AT JOBSITE	2-24
WORKING ON LOOSE GROUND	2-24
DISTANCE TO HIGH VOLTAGE CABLES	2-24
ENSURE GOOD VISIBILITY	2-25
VENTILATION FOR ENCLOSED AREA	2-26
SIGNALMAN'S SIGNAL AND SIGNS.....	2-26
EMERGENCY EXIT FROM OPERATOR'S CAB	2-26
ELECTROMAGNETIC INTERFERENCE	2-26
ASBESTOS DUST HAZARD PREVENTION	2-27
SAFETY MACHINE OPERATION	2-28
STARTING ENGINE	2-28
CHECKS BEFORE STARTING ENGINE	2-28
SAFETY RULES FOR STARTING ENGINE	2-29
STARTING ENGINE IN COLD WEATHER	2-29
OPERATION.....	2-30
CHECKS BEFORE OPERATION.....	2-30
SAFETY RULES FOR CHANGING MACHINE DIRECTIONS	2-30
SAFETY RULES FOR TRAVELLING.....	2-31
TRAVELLING ON SLOPES.....	2-32
OPERATIONS ON SLOPES	2-33
PROHIBITED OPERATIONS	2-33
OPERATIONS ON SNOW.....	2-35
PARKING MACHINE	2-35
TRANSPORTATION.....	2-36
LOADING AND UNLOADING.....	2-36
SHIPPING THE MACHINE	2-37
TURN OFF THE BATTERY DISCONNECT SWITCH TO THE OFF POSITION.....	2-38
BATTERY	2-38
STARTING ENGINE WITH BOOSTER CABLES	2-39
TOWING	2-40
SAFETY RULES FOR TOWING	2-40
LIFTING OBJECTS WITH BUCKET LINK LIFTING DEVICE (OPTIONAL EQUIPMENT).....	2-41
SAFETY RULES FOR LIFTING OBJECTS.....	2-41
LIFTING OBJECTS WITH BUCKET	2-43
SAFETY RULES FOR LIFTING OBJECTS.....	2-43