

# HYDRAULIC EXCAVATOR

## PC27MR-3

## PC30MR-3

## PC35MR-3

**Machine model      Serial number**

PC27MR-3	20002 and up
PC30MR-3	30001 and up
PC35MR-3	15001 and up

---

## 00 Index and foreword

### 100 Index

---

---

Composition of shop manual .....	2
Table of contents .....	4

## Table of contents

00 Index and foreword	
100 Index	SEN04065-07
Composition of shop manual.....	2
Table of contents.....	4
200 Foreword and general information	SEN04066-02
Safety notice.....	2
How to read the shop manual.....	7
Explanation of terms for maintenance standard.....	9
Handling of electric equipment and hydraulic component.....	11
Handling of connectors newly used for engines.....	20
How to read electric wire code.....	23
Precautions when carrying out operation.....	26
Method of disassembling and connecting push-pull type coupler.....	29
Standard tightening torque table.....	32
Conversion table.....	36
01 Specification	
100 Specification and technical data	SEN04068-02
Specification dimension drawing.....	2
Working range drawing.....	3
Specifications.....	4
Weight table.....	14
Table of fuel, coolant and lubricants.....	19
10 Structure, function and maintenance standard	
100 Engine and cooling system	SEN04070-00
PTO.....	2
Cooling system.....	4
200 Power train	SEN04071-00
Power train.....	2
Swing circle.....	4
Swing machinery.....	5
300 Undercarriage and frame	SEN04072-00
Track frame.....	2
Idler cushion.....	3
Idler.....	4
Track roller.....	6
Carrier roller.....	7
Sprocket.....	8
Track shoe.....	9
410 Hydraulic system, Part 1	SEN04073-02
Hydraulic components layout drawing.....	2
Hydraulic tank, filter.....	3
Center swivel joint.....	5
Travel motor.....	7
Hydraulic cylinder.....	15
Solenoid valve.....	20
Multi-control valve.....	26
420 Hydraulic system, Part 2	SEN04074-00
Hydraulic pump.....	2
Control valve.....	18