

Shop Manual

PC290LC-10

HYDRAULIC EXCAVATOR

SERIAL NUMBERS **PC290LC-10 A25001 and up**

ENGINE **6D107E-2**

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2017 Komatsu
Printed in U.S.A.
Komatsu America Corp.

00 Index and foreword

Index

Index (ALL-0310-001-A-00-A)

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-14
Important safety notice	00-14
How to read the shop manual	00-21
Explanation of terms for maintenance standard	00-23
Handling equipment of fuel system devices	00-25
Handling of intake system parts	00-26
Handling of hydraulic equipment	00-27
Method of disconnecting and connecting of push-pull type coupler	00-29
Handling of electrical equipment	00-32
How to read electric wire code	00-40
Precautions when performing operation	00-43
Practical use of KOMTRAX	00-48
Standard tightening torque table	00-49
List of abbreviation	00-55
Conversion table	00-60
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawings	01-3
Working range drawings	01-4
Specifications	01-5
Weight table	01-8
Table of fuel, coolant and lubricants	01-9
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-3
Engine related parts	10-3
KVTG	10-5
EGR system piping drawing	10-12
EGR system circuit diagram	10-14
EGR valve	10-16
EGR cooler	10-18
KCCV layout drawing	10-20
KCCV ventilator	10-22
KDPF	10-24
Cooling system	10-28
Power train	10-30
Power train system	10-30
Swing circle	10-32
Swing machinery	10-33
Final drive	10-35
Undercarriage and frame	10-37
Track frame and idler cushion	10-37
Hydraulic system	10-39
Hydraulic equipment layout drawing	10-39
Valve control	10-41
Hydraulic tank	10-43
CLSS	10-45
Main pump	10-50
Control valve	10-74
Swing motor	10-128
Travel motor	10-139
PPC valve	10-153
Solenoid valve	10-174
Attachment circuit selector valve (for high pressure circuit)	10-177

Attachment circuit selector valve (for low pressure circuit).....	10-179
Center swivel joint.....	10-182
Accumulator.....	10-184
Work equipment.....	10-185
Work equipment.....	10-185
Work equipment shim.....	10-186
Bucket play adjustment shim.....	10-187
Cab and its attachments.....	10-188
Cab mount and cab tipping stopper.....	10-188
ROPS cab.....	10-189
Electrical system.....	10-190
Electrical control system.....	10-190
Machine monitor system.....	10-234
KOMTRAX system.....	10-254
Sensor.....	10-256
20 Standard value tables.....	20-1
Table of contents.....	20-2
Standard service value table.....	20-3
Standard value table for engine related parts.....	20-3
Standard value table for chassis related parts.....	20-5
30 Testing and adjusting.....	30-1
Table of contents.....	30-2
Related information on testing and adjusting.....	30-3
Tools for testing and adjusting.....	30-3
Sketch of tools for testing and adjusting.....	30-7
Engine and cooling system.....	30-9
Testing engine speed.....	30-9
Testing boost pressure.....	30-10
Testing exhaust gas color.....	30-11
Testing and adjusting valve clearance.....	30-13
Testing compression pressure.....	30-16
Measuring blowby pressure.....	30-20
Measuring engine oil pressure.....	30-21
Measuring EGR valve and KVGT oil pressure.....	30-22
Measuring fuel pressure.....	30-23
Measuring fuel delivery, return and leakage.....	30-29
Bleeding air from fuel system.....	30-34
Testing fuel circuit for leakage.....	30-36
Handling cylinder cutout mode operation.....	30-37
Handling no-injection cranking operation.....	30-38
Testing and adjusting air conditioner compressor belt tension.....	30-39
Replacing fan belt.....	30-40
Power train.....	30-41
Testing swing circle bearing clearance.....	30-41
Undercarriage and frame.....	30-42
Testing and adjusting track tension.....	30-42
Hydraulic system.....	30-43
Releasing remaining pressure from hydraulic circuit.....	30-43
Measuring and adjusting oil pressure in work equipment, swing, and travel circuits.....	30-44
Testing oil pressure in control circuit.....	30-48
Testing and adjusting oil pressure in pump PC control circuit.....	30-49
Testing and adjusting oil pressure in pump LS control circuit.....	30-52
Testing output pressure of solenoid valve.....	30-57
Measuring PPC valve output pressure.....	30-61
Adjusting play of work equipment and swing PPC valves.....	30-63
Testing pump swash plate sensor.....	30-64
Isolating the parts causing hydraulic drift in work equipment.....	30-65
Testing oil leakage.....	30-67
Bleeding air from hydraulic circuit.....	30-70