

# **Shop Manual**

# **PC20-3**

# **PC30-3**

## **HYDRAULIC EXCAVATOR**

**SERIAL NUMBERS PC20-3 14001 and up**  
**PC30-3 2601 and up**

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2011 Komatsu  
Printed in U.S.A.  
Komatsu America Corp.

July 1992

# CONTENTS

	No. of page
<b>GENERAL</b> .....	01-1
<b>ENGINE</b>	
11 STRUCTURE AND FUNCTION .....	11-1
12 TESTING AND ADJUSTING .....	12-1
13 DISASSEMBLY AND ASSEMBLY .....	13-1
<b>POWER TRAIN</b>	
21 STRUCTURE AND FUNCTION .....	21-1
23 DISASSEMBLY AND ASSEMBLY .....	23-1
24 MAINTENANCE STANDARD .....	24-1
<b>UNDERCARRIAGE</b>	
31 STRUCTURE AND FUNCTION .....	31-1
33 DISASSEMBLY AND ASSEMBLY .....	33-1
34 MAINTENANCE STANDARD .....	34-1
<b>HYDRAULIC SYSTEM</b>	
61 STRUCTURE AND FUNCTION .....	61-1
62 TESTING AND ADJUSTING .....	62-1
63 DISASSEMBLY AND ASSEMBLY .....	63-1
64 MAINTENANCE STANDARD .....	64-1
<b>WORK EQUIPMENT</b>	
71 STRUCTURE AND FUNCTION .....	71-1
73 DISASSEMBLY AND ASSEMBLY .....	73-1
74 MAINTENANCE STANDARD .....	74-1
<b>ELECTRICAL SYSTEM</b>	
88 ELECTRICAL SYSTEM .....	88-1