

Operation & Maintenance Manual

HYDRAULIC
EXCAVATOR

PC300-8 **PC300LC-8**
PC350-8 **PC350LC-8**

SERIAL NUMBERS

PC300-60001 and up
PC350-60001

ecot3

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU

CONTENTS

FOREWORD	1- 1
BEFORE READING THIS MANUAL	1- 2
SAFETY INFORMATION	1- 3
INTRODUCTION	1- 4
USE OF MACHINE	1- 4
DIRECTIONS OF MACHINE	1- 4
VISIBILITY FROM OPERATOR'S SEAT	1- 4
PRODUCT INFORMATION	1- 5
PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE	1- 5
EPA REGULATIONS, ENGINE NUMBER PLATE	1- 5
SERVICE METER LOCATION	1- 6
YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR	1- 6
SAFETY	2- 1
SAFETY	2- 2
SAFETY LABELS	2- 5
LOCATION OF SAFETY LABELS	2- 5
SAFETY LABELS	2- 6
GENERAL PRECAUTIONS COMMON TO OPERATION AND MAINTENANCE	2- 12
PRECAUTIONS BEFORE STARTING OPERATION	2- 12
PREPARATIONS FOR SAFE OPERATION	2- 12
FIRE PREVENTION	2- 14
PRECAUTIONS WHEN GETTING ON OR OFF MACHINE	2- 15
DO NOT GET CAUGHT IN WORK EQUIPMENT	2- 17
PRECAUTIONS RELATED TO PROTECTIVE STRUCTURES	2- 17
PROTECTION AGAINST FALLING, FLYING, INTRUDING OBJECTS	2- 17
UNAUTHORIZED MODIFICATION	2- 18
PRECAUTIONS RELATED TO ATTACHMENTS AND OPTIONS	2- 18
PRECAUTIONS RELATED TO CAB GLASS	2- 18
PRECAUTIONS WHEN RUNNING ENGINE INSIDE BUILDING	2- 18
PRECAUTIONS FOR OPERATION	2- 19
PRECAUTIONS FOR JOBSITE	2- 19
STARTING ENGINE	2- 21
OPERATION	2- 23
TRANSPORTATION	2- 31
TOWING	2- 32
LIFTING OBJECTS WITH BUCKET	2- 33
PRECAUTIONS FOR MAINTENANCE	2- 34
PRECAUTIONS BEFORE STARTING INSPECTION AND MAINTENANCE	2- 34
PRECAUTIONS FOR INSPECTION AND MAINTENANCE	2- 38
OPERATION	3- 1
MACHINE VIEW ILLUSTRATIONS	3- 2
OVERALL MACHINE VIEW	3- 2
CONTROLS AND GAUGES	3- 3
DETAILED CONTROLS AND GAUGES	3- 5
MONITORING SYSTEM	3- 5
SWITCHES	3- 71
CONTROL LEVERS AND PEDALS	3- 76
SUN ROOF	3- 79
WINDSHIELD	3- 79

EMERGENCY ESCAPE HAMMER -----	3- 85
DOOR LOCK -----	3- 85
CAP WITH LOCK -----	3- 86
DRINK BOX -----	3- 88
MAGAZINE BOX -----	3- 88
ASHTRAY -----	3- 88
AIR CONDITIONER CONTROLS -----	3- 89
RADIO -----	3-102
AUXILIARY ELECTRIC POWER -----	3-107
FUSE -----	3-108
FUSIBLE LINK -----	3-109
CONTROLLER -----	3-109
TOOL BOX -----	3-110
GREASE PUMP HOLDER -----	3-110
FIRE EXTINGUISHER -----	3-110
MACHINE OPERATIONS AND CONTROLS -----	3-111
BEFORE STARTING ENGINE -----	3-111
STARTING ENGINE -----	3-131
AFTER STARTING ENGINE -----	3-134
STOPPING THE ENGINE -----	3-145
MACHINE OPERATION -----	3-146
STEERING THE MACHINE -----	3-150
SWINGING -----	3-152
WORK EQUIPMENT CONTROLS AND OPERATIONS -----	3-153
WORKING MODE -----	3-155
PROHIBITED OPERATIONS -----	3-157
GENERAL OPERATION INFORMATION -----	3-162
TRAVELING ON SLOPES -----	3-164
ESCAPE FROM MUD -----	3-166
RECOMMENDED APPLICATIONS -----	3-167
BUCKET REPLACEMENT AND INVERSION -----	3-169
PARKING MACHINE -----	3-173
MACHINE INSPECTION AFTER DAILY WORK -----	3-174
LOCKING -----	3-175
TRANSPORTATION -----	3-176
TRANSPORTATION PROCEDURE -----	3-176
LOADING AND UNLOADING WITH TRAILER -----	3-177
LIFTING MACHINE -----	3-186
TRANSPORTATION POSTURE -----	3-188
COLD WEATHER OPERATION -----	3-190
COLD WEATHER OPERATION INFORMATION -----	3-190
AFTER DAILY WORK COMPLETION -----	3-192
AFTER COLD WEATHER SEASON -----	3-192
LONG TERM STORAGE -----	3-193
BEFORE STORAGE -----	3-193
DURING STORAGE -----	3-193
AFTER STORAGE -----	3-194
STARTING MACHINE AFTER LONG-TERM STORAGE -----	3-194
TROUBLES AND ACTIONS -----	3-195
RUNNING OUT OF FUEL -----	3-195