

# Operation & Maintenance Manual

SEAM009003T

## PC300,300LC-6 PC350,350LC-6 HYDRAULIC EXCAVATOR

SERIAL NUMBERS PC300,300LC-33466 and up  
PC350,350LC-12284

### WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

### NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

# KOMATSU

# 5. CONTENTS

---

|  |      |
|--|------|
| 1. Foreword .....  | 0- 1 |
| 2. Safety information .....  | 0- 2 |
| 3. Introduction .....  | 0- 3 |
| 4. Location of plates, table to enter serial No. and distributor ..... | 0- 4 |

## SAFETY

|   |      |
|---|------|
| 6. General precautions .....                  | 1- 2 |
| 7. Precautions during operation .....         | 1-11 |
| 7.1 Before starting engine .....              | 1-11 |
| 7.2 Operating machine .....                   | 1-13 |
| 7.3 Transportation .....                      | 1-21 |
| 7.4 Battery .....                             | 1-23 |
| 7.5 Towing .....                              | 1-25 |
| 7.6 Bucket with hook .....                    | 1-26 |
| 8. Precautions for maintenance .....          | 1-27 |
| 8.1 Before carrying out maintenance .....     | 1-27 |
| 8.2 During maintenance .....                  | 1-32 |
| 9. Position for attaching safety labels ..... | 1-39 |

## OPERATION

|  |      |
|--|------|
| 10. General view .....                         | 2- 2 |
| 10.1 General view of machine .....             | 2- 2 |
| 10.2 General view of controls and gauges ..... | 2- 3 |
| 11. Explanation of components .....            | 2- 4 |
| 11.1 Machine monitor .....                     | 2- 4 |
| 11.2 Switches .....                            | 2-15 |
| 11.3 Control levers, pedals .....              | 2-19 |
| 11.4 Ceiling window .....                      | 2-24 |
| 11.5 Front window .....                        | 2-25 |
| 11.6 Door lock .....                           | 2-27 |
| 11.7 Cap, cover with lock .....                | 2-28 |
| 11.8 Hot and cool box .....                    | 2-29 |
| 11.9 Luggage box .....                         | 2-29 |
| 11.10 Ashtray .....                            | 2-29 |
| 11.11 Handling air conditioner .....           | 2-30 |
| 11.12 Car radio .....                          | 2-33 |
| 11.13 Electric power take-out adapter .....    | 2-37 |
| 11.14 Fuse .....                               | 2-38 |
| 11.15 Fusible link .....                       | 2-39 |
| 11.16 Controllers .....                        | 2-39 |
| 11.17 Tool box .....                           | 2-39 |
| 11.18 Greas gun holder .....                   | 2-39 |
| 11.19 Handling accumulator .....               | 2-40 |

|   |       |
|---|-------|
| <b>12. Operation</b> .....                              | 2-41  |
| 12.1 Check before starting engine .....                 | 2-41  |
| 12.2 Starting engine .....                              | 2-52  |
| 12.3 Operations and checks after starting engine .....  | 2-55  |
| 12.4 Moving machine off .....                           | 2-61  |
| 12.5 Steering machine .....                             | 2-64  |
| 12.6 Stopping machine .....                             | 2-66  |
| 12.7 Swinging .....                                     | 2-67  |
| 12.8 Operation of work equipment .....                  | 2-68  |
| 12.9 Handling active mode .....                         | 2-69  |
| 12.10 Handling working mode .....                       | 2-70  |
| 12.11 Prohibitions for operation .....                  | 2-72  |
| 12.12 Precautions for operation .....                   | 2-74  |
| 12.13 Precautions when traveling up or down hills ..... | 2-75  |
| 12.14 How to escape from mud .....                      | 2-77  |
| 12.15 Work possible using hydraulic excavator .....     | 2-78  |
| 12.16 Replacement and inversion of bucket .....         | 2-79  |
| 12.17 Parking machine .....                             | 2-81  |
| 12.18 Check after finishing work .....                  | 2-82  |
| 12.19 Stopping engine .....                             | 2-83  |
| 12.20 Check after stopping engine .....                 | 2-84  |
| 12.21 Locking .....                                     | 2-84  |
| <b>13. Transportation</b> .....                         | 2-85  |
| 13.1 Transportation procedure .....                     | 2-85  |
| 13.2 Loading, unloading work with trailers .....        | 2-86  |
| 13.3 Method of lifting machine .....                    | 2-92  |
| <b>14. Cold weather operation</b> .....                 | 2-93  |
| 14.1 Precautions for low temperature .....              | 2-93  |
| 14.2 Precautions after completion of work .....         | 2-95  |
| 14.3 After cold weather .....                           | 2-95  |
| <b>15. Long-term storage</b> .....                      | 2-96  |
| 15.1 Before storage .....                               | 2-96  |
| 15.2 During storage .....                               | 2-97  |
| 15.3 After storage .....                                | 2-97  |
| 15.4 Starting machine after long-term storage .....     | 2-97  |
| <b>16. Troubleshooting</b> .....                        | 2-98  |
| 16.1 Phenomena that are not failures .....              | 2-98  |
| 16.2 Method of towing machine .....                     | 2-98  |
| 16.3 Using method for light-weight towing hole .....    | 2-98  |
| 16.4 Precautions on particular jobsites .....           | 2-99  |
| 16.5 If battery is discharged .....                     | 2-99  |
| 16.6 Other trouble .....                                | 2-104 |