

Operation & Maintenance Manual

UEAM007002



PC350LC-8

PC350NLC-8

HYDRAULIC EXCAVATOR

SERIAL NUMBER

PC350LC-8 - K50001 and up

PC350NLC-8 - K50001 and up

PC350LCD-8 - K50001 and up

PC350NLCD-8 - K50001 and up



WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept inside the cab for reference and periodically reviewed by all personnel who will come into contact with the machine.

KOMATSU

CONTENTS

FOREWORD

FOREWORD	1-2
SAFETY INFORMATION.....	1-3
Noise emission levels	1-5
Vibration levels.....	1-5
Operating condition:	1-6
Guide to Reduce Vibration Levels on Machine.....	1-6
INTRODUCTION.....	1-7
DIRECTIONS OF MACHINE	1-7
BREAKING-IN THE NEW MACHINE	1-8
PRODUCT INFORMATION	1-9
PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE.....	1-9
EPA REGULATIONS, ENGINE NUMBER PLATE	1-9
SERVICE METER LOCATION	1-10
TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR	1-11
MACHINE SERIAL PLATE	1-11

SAFETY

SAFETY INFORMATION.....	2-2
SAFETY LABELS.....	2-4
LOCATION OF SAFETY LABELS	2-4
SAFETY LABELS	2-5
SAFETY INFORMATION.....	2-13
SAFETY MACHINE OPERATION.....	2-23
STARTING ENGINE	2-23
OPERATION.....	2-25
TRANSPORTATION.....	2-31
BATTERY	2-32
TOWING	2-34
LIFTING OBJECTS WITH BUCKET	2-35
SAFETY MAINTENANCE INFORMATION	2-36

OPERATION

MACHINE VIEW ILLUSTRATIONS	3-2
OVERALL MACHINE VIEW.....	3-2
CONTROLS AND GAUGES.....	3-3
DETAILED CONTROLS AND GAUGES.....	3-5
MONITORING SYSTEM.....	3-5
Basic Operation of Machine Monitor.....	3-6
Emergency Monitors.....	3-11
Caution Monitors.....	3-13
Basic Check Monitors	3-16
Meter Display Portion	3-18
Monitor Switches Portion.....	3-26
Handling Function Switches	3-35
SWITCHES.....	3-75
CONTROL LEVERS AND PEDALS	3-82
SUN ROOF	3-85
WINDSHIELD	3-86
EMERGENCY ESCAPE HAMMER	3-92
DOOR LOCK	3-92
CAP WITH LOCK.....	3-93
DRINK BOX	3-95
MAGAZINE BOX.....	3-95
ASHTRAY	3-95
AIR CONDITIONER CONTROLS.....	3-96
Air Conditioner Control Panel	3-96
Method of Operation.....	3-101
Use Air Conditioner with Care	3-108
Inspection and maintenance of Air Conditioner Equipped Machine	3-108
RADIO.....	3-109
Control Panel	3-109
Controls of Radio.....	3-111
Use Radio with Care.....	3-113
Space for radio cassette	3-113
AUXILIARY ELECTRIC POWER.....	3-114
24V Power Source.....	3-114
12V Power Source.....	3-114
FUSE	3-115
FUSIBLE LINK.....	3-116
CONTROLLER	3-116
TOOL BOX.....	3-117
GREASE PUMP HOLDER.....	3-117
FIRE EXTINGUISHER.....	3-117
REFUELLING PUMP	3-118
HANDLING THE ACCUMULATOR	3-119
RELEASING PRESSURE IN CONTROL CIRCUIT ON MACHINE EQUIPPED WITH ACCUMULATOR.....	3-119