

# HYDRAULIC EXCAVATOR

**PC350LC-8  
PC350LCD-8  
PC350NLC-8  
PC350NLCD-8**

**Machine model      Serial number**

PC350LC-8	K50001 and up
PC350LCD-8	K50001 and up
PC350NLC-8	K50001 and up
PC350NLCD-8	K50001 and up

---

## 00 Index and foreword

### Index

---

---

Composition of shop manual.....	2
Table of contents .....	4

## Table of contents

00 Index and foreword	
Index	UEN01985-03
Composition of shop manual .....	2
Table of contents .....	4
Foreword and general information	UEN01986-00
Safety notice.....	2
How to read the shop manual .....	7
Explanation of terms for maintenance standard .....	9
Handling electric equipment and hydraulic component.....	11
How to read electric wire code .....	23
Precautions when carrying out operation .....	26
Method of disassembling and connecting push-pull type coupler.....	29
Standard tightening torque table .....	32
Conversion table .....	36
01 Specification	
Specification and technical data	UEN01988-02
Specification dimension drawings .....	2
Dimensions.....	2
Working ranges .....	3
Weight table .....	7
Table of fuel, coolant and lubricants .....	8
10 Structure, function and maintenance standard	
Engine and cooling system	UEN01990-01
Engine related parts .....	2
Radiator, oil cooler and aftercooler.....	3
Diesel Particulate Filter .....	4
Power train	UEN01991-00
Power train .....	2
Final drive.....	4
Sprocket .....	6
Swing machinery .....	8
Swing circle .....	10
Undercarriage and frame	UEN01992-00
Track frame and recoil spring .....	2
Idler .....	4
Carrier roller .....	6
Track roller.....	7
Track shoe.....	8
Hydraulic system, Part 1	UEN01993-00
Hydraulic equipment layout drawing .....	2
Hydraulic tank and filter .....	4
Hydraulic pump .....	6
Hydraulic system, Part 2	UEN01994-00
Control valve .....	2
CLSS .....	14
Outline of CLSS.....	14
Basic principle .....	15
Functions and operation by valve.....	18
Hydraulic circuit diagram and the name of valves.....	18
Unload valve.....	20
Introduction of LS pressure .....	22