

Operation & Maintenance Manual

HYDRAULIC
EXCAVATOR

PC27MR -3
PC35MR -3

SERIAL NUMBERS

PC27MR- 20002
PC35MR- 15001

and up

⚠ WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU

CONTENTS

| | |
|--|-------|
| FOREWORD | 1- 1 |
| FOREWORD | 1- 2 |
| SAFETY INFORMATION | 1- 3 |
| INTRODUCTION | 1- 5 |
| DIRECTIONS OF MACHINE | 1- 5 |
| PRODUCT INFORMATION | 1- 6 |
| PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE | 1- 6 |
| ENGINE SERIAL NUMBER PLATE AND ITS LOCATION | 1- 6 |
| EPA NAMEPLATE | 1- 7 |
| SERVICE METER LOCATION | 1- 7 |
| YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR | 1- 8 |
| SAFETY | 2- 1 |
| SAFETY | 2- 2 |
| SAFETY LABELS | 2- 4 |
| LOCATION OF SAFETY LABELS | 2- 4 |
| SAFETY LABELS | 2- 5 |
| GENERAL PRECAUTIONS | 2- 10 |
| SAFETY MACHINE OPERATION | 2- 19 |
| STARTING ENGINE | 2- 19 |
| OPERATION | 2- 21 |
| TRANSPORTATION | 2- 27 |
| BATTERY | 2- 28 |
| TOWING | 2- 30 |
| LIFTING OBJECTS WITH BUCKET | 2- 31 |
| SAFETY MAINTENANCE INFORMATION | 2- 32 |
| OPERATION | 3- 1 |
| MACHINE VIEW ILLUSTRATIONS | 3- 2 |
| OVERALL MACHINE VIEW | 3- 2 |
| CONTROLS AND GAUGES | 3- 3 |
| DETAILED CONTROLS AND GAUGES | 3- 4 |
| MONITORING SYSTEM | 3- 4 |
| SWITCHES | 3- 10 |
| CONTROL LEVERS AND PEDALS | 3- 14 |
| WINDSHIELD | 3- 20 |
| SLIDING DOOR | 3- 24 |
| SLIDING WINDOW | 3- 24 |
| EMERGENCY ESCAPE HAMMER | 3- 25 |
| COVER WITH LOCK | 3- 26 |
| ENGINE REAR COVER | 3- 27 |
| COOLING COVER | 3- 27 |
| MUD COVER | 3- 28 |
| METHOD OF OPENING (TILTING) FLOOR | 3- 29 |
| AUXILIARY ELECTRIC POWER | 3- 35 |
| FUSE | 3- 35 |
| BLOCK FUSE | 3- 36 |
| OPERATION MANUAL STORAGE | 3- 37 |
| TOOL BOX | 3- 37 |
| GREASE GUN HOLDER | 3- 37 |
| ASHTRAY | 3- 37 |

| | |
|--|-------|
| HANDLING MACHINES EQUIPPED WITH KOMTRAX ----- | 3- 38 |
| MACHINE OPERATIONS AND CONTROLS ----- | 3- 39 |
| BEFORE STARTING ENGINE ----- | 3- 39 |
| STARTING ENGINE ----- | 3- 55 |
| AFTER STARTING ENGINE ----- | 3- 59 |
| STOPPING THE ENGINE ----- | 3- 62 |
| MACHINE OPERATION ----- | 3- 63 |
| STEERING THE MACHINE ----- | 3- 68 |
| SWINGING ----- | 3- 70 |
| WORK EQUIPMENT CONTROLS AND OPERATIONS ----- | 3- 71 |
| PROHIBITED OPERATIONS ----- | 3- 73 |
| GENERAL OPERATION INFORMATION ----- | 3- 75 |
| TRAVELING ON SLOPES ----- | 3- 77 |
| ESCAPE FROM MUD ----- | 3- 79 |
| WORK POSSIBLE USING COMPACT HYDRAULIC EXCAVATOR ----- | 3- 80 |
| BUCKET REPLACEMENT ----- | 3- 82 |
| PARKING MACHINE ----- | 3- 83 |
| MACHINE INSPECTION AFTER DAILY WORK ----- | 3- 84 |
| LOCKING ----- | 3- 85 |
| RUBBER SHOES AND ROAD LINERS ----- | 3- 86 |
| TRANSPORTATION ----- | 3- 91 |
| TRANSPORTATION PROCEDURE ----- | 3- 91 |
| LOADING AND UNLOADING WITH TRAILER ----- | 3- 92 |
| LIFTING MACHINE ----- | 3- 98 |
| COLD WEATHER OPERATION ----- | 3-101 |
| COLD WEATHER OPERATION INFORMATION ----- | 3-101 |
| CAB HEATER IN COLD WEATHER ----- | 3-102 |
| AFTER DAILY WORK COMPLETION ----- | 3-103 |
| AFTER COLD WEATHER SEASON ----- | 3-103 |
| LONG TERM STORAGE ----- | 3-104 |
| BEFORE STORAGE ----- | 3-104 |
| DURING STORAGE ----- | 3-104 |
| AFTER STORAGE ----- | 3-104 |
| TROUBLES AND ACTIONS ----- | 3-106 |
| RUNNING OUT OF FUEL ----- | 3-106 |
| PHENOMENA THAT ARE NOT FAILURES ----- | 3-106 |
| TOWING THE MACHINE ----- | 3-107 |
| SEVERE JOB CONDITION ----- | 3-107 |
| DISCHARGED BATTERY ----- | 3-108 |
| OTHER TROUBLE ----- | 3-112 |
| MAINTENANCE ----- | 4- 1 |
| MAINTENANCE INFORMATION ----- | 4- 2 |
| OUTLINE OF SERVICE ----- | 4- 4 |
| HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC ----- | 4- 4 |
| ELECTRIC SYSTEM MAINTENANCE ----- | 4- 8 |
| HANDLING HYDRAULIC SYSTEM ----- | 4- 8 |
| WEAR PARTS ----- | 4- 9 |
| WEAR PARTS LIST ----- | 4- 9 |
| RECOMMENDED FUEL, COOLANT, AND LUBRICANT ----- | 4- 10 |
| TIGHTENING TORQUE SPECIFICATIONS ----- | 4- 13 |