

# Operation & Maintenance Manual

HYDRAULIC  
EXCAVATOR

***PC30MR-5***  
***PC35MR-5***

SERIAL NUMBERS

PC30MR-50001  
PC35MR-30001

and up

**⚠ WARNING**

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

**NOTICE**

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

**KOMATSU**

# TABLE OF CONTENTS

FOREWORD.....	1-1
READ THIS MANUAL .....	1-2
SAFETY INFORMATION .....	1-3
INTRODUCTION .....	1-4
MAIN USE OF MACHINE .....	1-4
DIRECTIONS OF MACHINE.....	1-4
PROTECTIVE STRUCTURES.....	1-4
PRODUCT INFORMATION.....	1-5
LOCATION OF PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE .....	1-5
LOCATION OF ENGINE NUMBER PLATE .....	1-5
SERVICE METER LOCATION.....	1-6
YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR.....	1-6
SAFETY.....	2-1
SAFETY LABELS .....	2-2
LOCATION OF SAFETY LABELS.....	2-3
CONTENTS OF SAFETY LABELS .....	2-6
GENERAL PRECAUTIONS COMMON TO OPERATION AND MAINTENANCE .....	2-13
PRECAUTIONS BEFORE STARTING OPERATION.....	2-13
PREPARATIONS FOR SAFE OPERATION .....	2-13
PRECAUTIONS TO PREVENT FIRE.....	2-15
PRECAUTIONS WHEN GETTING ON OR OFF MACHINE.....	2-17
DO NOT GET CAUGHT IN WORK EQUIPMENT .....	2-18
PRECAUTIONS RELATED TO PROTECTIVE STRUCTURES.....	2-19
PROTECTION AGAINST FALLING, FLYING OR INTRUDING OBJECTS.....	2-20
UNAUTHORIZED MODIFICATION .....	2-20
PRECAUTIONS RELATED TO ATTACHMENTS AND OPTIONS .....	2-20
PRECAUTIONS RELATED TO CAB GLASS .....	2-21
PRECAUTIONS WHEN RUNNING ENGINE INSIDE BUILDING .....	2-21
PRECAUTIONS FOR OPERATION .....	2-22
PRECAUTIONS FOR JOBSITE.....	2-22
START ENGINE.....	2-25
PRECAUTIONS FOR OPERATION .....	2-27
PRECAUTIONS FOR TRANSPORTATION.....	2-35
TOWING AND BEING TOWED.....	2-36
LIFTING OPERATION BY USING BUCKET WITH HOOK.....	2-37
PRECAUTIONS FOR MAINTENANCE .....	2-38
PRECAUTIONS BEFORE STARTING INSPECTION AND MAINTENANCE .....	2-38
PRECAUTIONS FOR CHECK AND MAINTENANCE .....	2-42
OPERATION.....	3-1
GENERAL VIEW.....	3-2
MACHINE EQUIPMENT NAME .....	3-2
CONTROLS AND GAUGES NAMES.....	3-4
OTHER EQUIPMENT NAME .....	3-7
EXPLANATION OF COMPONENTS.....	3-10
EXPLANATION OF MACHINE MONITOR EQUIPMENT .....	3-10
SWITCHES.....	3-68
CONTROL LEVERS AND PEDALS .....	3-77
OTHER EQUIPMENT .....	3-85
MACHINE OPERATIONS AND CONTROLS .....	3-113
CHECKS AND ADJUSTMENT BEFORE STARTING ENGINE .....	3-113
METHOD FOR STARTING ENGINE.....	3-139
METHOD FOR OPERATIONS AND CHECKS AFTER STARTING ENGINE .....	3-142
METHOD FOR STOPPING ENGINE .....	3-150
METHOD FOR STARTING MACHINE (TRAVEL FORWARD AND REVERSE) AND STOPPING MACHINE .....	3-151
METHOD FOR STEERING MACHINE.....	3-157

METHOD FOR SWINGING MACHINE .....	3-159
METHOD FOR OPERATING WORK EQUIPMENT .....	3-160
HANDLE WORKING MODE .....	3-163
PROHIBITED OPERATIONS .....	3-164
PRECAUTIONS FOR OPERATION .....	3-169
PRECAUTIONS FOR WORKING ON SLOPE .....	3-171
METHOD FOR ESCAPING FROM MUD .....	3-173
RECOMMENDED APPLICATIONS .....	3-174
METHOD FOR REPLACING BUCKET .....	3-176
METHOD FOR PARKING MACHINE .....	3-178
METHOD FOR CHECKING AFTER FINISHING WORK .....	3-179
LOCK .....	3-180
HANDLE AIR CONDITIONER .....	3-190
EXPLANATION OF AIR CONDITIONER EQUIPMENT .....	3-190
METHOD FOR OPERATING AIR CONDITIONER .....	3-192
HANDLE RUBBER AND ROAD LINERS SHOES .....	3-194
RECOMMENDED USE OF RUBBER AND ROAD LINERS SHOES .....	3-194
COMPARISON OF RUBBER ,ROAD LINERS SHOES AND STEEL SHOES .....	3-194
WARRANTY OF RUBBER AND ROAD LINERS SHOES .....	3-194
PROHIBITED OPERATIONS WHEN USING RUBBER AND ROAD LINERS SHOES .....	3-195
PRECAUTIONS FOR USING RUBBER AND ROAD LINERS SHOES .....	3-196
TRANSPORTATION .....	3-199
PRECAUTIONS FOR TRANSPORTING MACHINE .....	3-199
SELECT TRANSPORTATION METHOD .....	3-199
LOADING AND UNLOADING WITH TRAILER .....	3-200
METHOD FOR LIFTING MACHINE .....	3-207
COLD WEATHER OPERATION .....	3-210
COLD WEATHER OPERATION INFORMATION .....	3-210
PRECAUTIONS AFTER DAILY WORK COMPLETION .....	3-212
AFTER COLD WEATHER SEASON .....	3-212
PRECAUTIONS FOR LONG-TERM STORAGE .....	3-213
PREPARATION FOR LONG-TERM STORAGE .....	3-213
MAINTENANCE DURING LONG-TERM STORAGE .....	3-214
STARTING MACHINE AFTER LONG-TERM STORAGE .....	3-214
TROUBLES AND ACTIONS .....	3-215
ACTIONS WHEN RUNNING OUT OF FUEL .....	3-215
PHENOMENA THAT ARE NOT FAILURES .....	3-216
PRECAUTIONS FOR TOWING MACHINE .....	3-217
PRECAUTIONS FOR SEVERE JOB CONDITION .....	3-217
PRECAUTIONS FOR DISCHARGED BATTERY .....	3-218
OTHER TROUBLE .....	3-224
MAINTENANCE .....	4-1
PRECAUTIONS FOR MAINTENANCE .....	4-2
CHECK SERVICE METER READING .....	4-2
KOMATSU GENUINE REPLACEMENT PARTS .....	4-2
KOMATSU GENUINE LUBRICANTS .....	4-2
ALWAYS USE CLEAN WASHER FLUID .....	4-2
FRESH AND CLEAN LUBRICANTS .....	4-2
CHECK DRAINED OIL AND USED FILTER .....	4-2
PRECAUTIONS FOR REFILLING OIL OR FUEL .....	4-2
PRECAUTIONS FOR WELDING .....	4-2
DO NOT DROP THINGS INSIDE MACHINE .....	4-2
DUSTY JOBSITES .....	4-3
AVOID MIXING OIL .....	4-3
LOCK INSPECTION COVERS .....	4-3
PRECAUTIONS WHEN SWINGING BOOM .....	4-3
PRECAUTIONS WHEN OPENING AND CLOSING COOLING COVER .....	4-3
BLEED AIR FROM HYDRAULIC CIRCUIT .....	4-3