

Operation & Maintenance Manual

PC360LC-10

PC390LC-10

HYDRAULIC EXCAVATOR

SERIAL NUMBERS

**PC360LC-10 A32001 and up
PC360LC-10 K64001 and up
PC390LC-10 A30001 and up**

ENGINE

6D114E-5

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2017 Komatsu
Printed in U.S.A.
Komatsu America Corp.

CONTENTS

INTRODUCTION.....	1-1
Foreword.....	1-2
Safety Alert Symbol and Signal Words.....	1-3
Basic Machine Introduction.....	1-4
Product Information.....	1-6
SAFETY.....	2-1
Safety Labels.....	2-2
Location of Safety Labels.....	2-3
General Precautions Common to Operation and Maintenance.....	2-14
Precautions Before Starting Operation.....	2-14
Preparations for Safe Operation.....	2-14
Fire and Explosion Prevention.....	2-15
Precautions When Getting On or Off the Machine.....	2-17
Precautions for Cab and Working Around Machine.....	2-19
Operation Precautions.....	2-21
Precautions at Jobsite.....	2-21
Precautions in Starting Engine.....	2-23
Precautions During Operation.....	2-25
Transportation Safety.....	2-31
Towing Precaution.....	2-32
Lifting Objects With Bucket.....	2-32
Maintenance Precautions.....	2-34
Precautions Before Inspection and Maintenance.....	2-34
Precautions During Inspection and Maintenance.....	2-37
OPERATION.....	3-1
Visual Overview of Machine.....	3-2
General Machine View.....	3-2
General View of Cab.....	3-4
Controls and Gauges.....	3-5
Machine Monitor Overview.....	3-6
Machine Monitor Components.....	3-7
Basic Operation of Machine Monitor.....	3-7
Starting Engine When Situation is Normal.....	3-7
Starting Engine While Engine Shutdown Secondary Switch is ON.....	3-9
Stopping Engine When Situation is Normal.....	3-9
If There is Abnormality When Starting Engine.....	3-10
If Any Abnormality Occurs During Operation.....	3-11
Warning Lamps.....	3-12
Action Level Display.....	3-13
Warning Lamp Table.....	3-14
Occurred Error List Display.....	3-16
Warning Lamp Details	3-17
Pilot Display.....	3-23
Pilot Lamp Details.....	3-23
ECO Guidance.....	3-27
Gauge and Meter Display.....	3-28

Gauge and Meter Details.....	3-29
Monitor Switches.....	3-32
Guidance Icons and Function Switches.....	3-32
Working Mode Selector Switch.....	3-34
Auto-Deceleration Switch.....	3-35
Travel Speed Selector Switch.....	3-35
Wiper Switch.....	3-37
Window Washer Switch.....	3-38
Buzzer Cancel Switch.....	3-39
Air Conditioner Switch.....	3-39
Camera Screen Selector Switch.....	3-40
Display of One Camera View on Screen.....	3-40
Displaying Two Camera Views Simultaneously.....	3-41
Allowed Mode Operations When Displaying Camera View.....	3-41
Error or Warning While in Camera View.....	3-43
User Menu.....	3-44
Energy Saving Guidance Tab.....	3-46
Machine Settings.....	3-54
KDPF Regeneration Tab.....	3-58
Maintenance Setting.....	3-58
Monitor Settings Tab.....	3-60
Message Display Tab.....	3-66
Operator Cab Switches.....	3-69
Control Levers and Pedals.....	3-76
Air Conditioner Operations.....	3-79
Air Conditioner Control Switches and Sensor.....	3-80
Using A/C in Auto Mode.....	3-84
Using A/C in Manual Mode.....	3-85
Blowing Cold Air to Face, Warm Air to Feet.....	3-87
Using Defrost Mode.....	3-88
Radio Operations.....	3-91
Radio Buttons and Display.....	3-91
Radio Setting and Adjusting.....	3-92
Auxiliary Electric Power.....	3-94
Fuses.....	3-95
Cab Windows.....	3-97
Opening and Closing Roof Window.....	3-97
Opening and Closing Windshield.....	3-97
Opening Windshield.....	3-98
Closing Windshield.....	3-100
Removing Lower Windshield.....	3-101
Emergency Escape Hammer.....	3-102
Cab Door.....	3-103
Containers and Fire Extinguisher.....	3-104
Engine Hood.....	3-106
Opening Engine Hood.....	3-106
Closing Engine Hood.....	3-107
Caps and Covers with Lock.....	3-109
Open and Close Caps with Locks.....	3-109
Open and Close Covers with Locks.....	3-110
Lock and Unlock Engine Hood.....	3-110
Lock and Unlock the Cab Door.....	3-111
Battery Disconnect Switch.....	3-112
System Operating Lamp.....	3-113
Komatsu Diesel Particulate Filter (KDPF).....	3-114
Manual Stationary Regeneration Procedure.....	3-117