

Operation & Maintenance Manual

PC360LC-11

PC390LC-11

SERIAL NUMBERS **PC360LC-11 A35001 and up**
 PC390LC-11 A30401 and up

ENGINE **6D114E-6**

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2016 Komatsu
Printed in U.S.A.
Komatsu America Corp.

TABLE OF CONTENTS

FOREWORD.....	1-1
BEFORE READING THIS MANUAL	1-2
SAFETY INFORMATION	1-3
INTRODUCTION	1-4
MAIN USE OF MACHINE	1-4
DIRECTIONS OF MACHINE.....	1-4
VISIBILITY FROM OPERATOR'S SEAT	1-5
ENGINE TECHNOLOGY TO CONFORM EXHAUST GAS EMISSION	1-6
PRODUCT INFORMATION.....	1-7
LOCATION OF PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE	1-7
LOCATION OF ENGINE NUMBER PLATE	1-7
SERVICE METER LOCATION.....	1-8
YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR.....	1-8
SAFETY.....	2-1
SAFETY.....	2-2
SAFETY LABELS	2-4
LOCATION OF SAFETY LABELS.....	2-5
CONTENTS OF SAFETY LABELS	2-7
GENERAL PRECAUTIONS COMMON TO OPERATION AND MAINTENANCE	2-16
PRECAUTIONS BEFORE STARTING OPERATION.....	2-16
PREPARATIONS FOR SAFE OPERATION	2-16
PRECAUTIONS TO PREVENT FIRE.....	2-18
PRECAUTIONS WHEN GETTING ON OR OFF MACHINE.....	2-20
DO NOT GET CAUGHT IN WORK EQUIPMENT	2-22
PRECAUTIONS RELATED TO PROTECTIVE STRUCTURES.....	2-22
PROTECTION AGAINST FALLING, FLYING OR INTRUDING OBJECTS.....	2-22
UNAUTHORIZED MODIFICATION	2-23
PRECAUTIONS RELATED TO ATTACHMENTS AND OPTIONS	2-23
PRECAUTIONS RELATED TO CAB GLASS	2-23
PRECAUTIONS WHEN RUNNING ENGINE INSIDE BUILDING	2-23
PRECAUTIONS FOR OPERATION	2-24
PRECAUTIONS FOR JOBSITE.....	2-24
START ENGINE.....	2-27
PRECAUTIONS FOR OPERATION	2-29
PRECAUTIONS FOR TRANSPORTATION.....	2-37
TOWING AND BEING TOWED.....	2-38
LIFTING OPERATION BY USING BUCKET WITH HOOK.....	2-38
PRECAUTIONS FOR MAINTENANCE	2-40
PRECAUTIONS BEFORE STARTING INSPECTION AND MAINTENANCE	2-40
PRECAUTIONS FOR CHECK AND MAINTENANCE	2-44
PRECAUTIONS FOR DEF.....	2-50
GENERAL CHARACTER AND PRECAUTIONS FOR HANDLING	2-50
PRECAUTIONS FOR ADDING.....	2-50
PRECAUTIONS FOR STORING.....	2-50
PRECAUTIONS FOR FIRE HAZARD AND LEAKAGE	2-50
OTHER PRECAUTIONS.....	2-50
OPERATION.....	3-1
GENERAL VIEW.....	3-2
MACHINE EQUIPMENT NAME	3-2
CAB EQUIPMENT NAMES.....	3-4
CONTROLS AND GAUGES NAMES.....	3-5
EXPLANATION OF COMPONENTS.....	3-9
EXPLANATION OF MACHINE MONITOR EQUIPMENT	3-9
SWITCHES.....	3-92
CONTROL LEVERS AND PEDALS	3-102
OTHER EQUIPMENT	3-105

MACHINE OPERATIONS AND CONTROLS	3-149
CHECKS AND ADJUSTMENT BEFORE STARTING ENGINE	3-149
METHOD FOR STARTING ENGINE	3-182
METHOD FOR OPERATIONS AND CHECKS AFTER STARTING ENGINE	3-186
METHOD FOR STOPPING ENGINE	3-197
METHOD FOR STARTING MACHINE (TRAVEL FORWARD AND REVERSE) AND STOPPING MACHINE	3-199
METHOD FOR STEERING MACHINE	3-202
METHOD FOR SWINGING MACHINE	3-204
METHOD FOR OPERATING WORK EQUIPMENT	3-205
HANDLE WORKING MODE	3-207
PROHIBITED OPERATIONS	3-210
PRECAUTIONS FOR OPERATION	3-214
PRECAUTIONS FOR WORKING ON SLOPE	3-216
METHOD FOR ESCAPING FROM MUD	3-217
RECOMMENDED APPLICATIONS	3-218
EFFECTIVE USE OF HYDRAULIC EXCAVATOR	3-219
METHOD FOR REPLACING AND INVERTING BUCKET	3-220
METHOD FOR PARKING MACHINE	3-223
METHOD FOR CHECKING AFTER FINISHING WORK	3-224
LOCK	3-225
HANDLE AIR CONDITIONER	3-232
EXPLANATION OF AIR CONDITIONER EQUIPMENT	3-233
METHOD FOR OPERATING AIR CONDITIONER	3-237
HANDLING RADIO	3-246
EXPLANATION OF RADIO EQUIPMENT	3-246
METHOD FOR CONTROLLING RADIO	3-249
STOW ANTENNA	3-251
TRANSPORTATION	3-252
PRECAUTIONS FOR TRANSPORTING MACHINE	3-252
SELECT TRANSPORTATION METHOD	3-252
LOADING AND UNLOADING WITH TRAILER	3-253
METHOD FOR LIFTING MACHINE	3-266
COLD WEATHER OPERATION	3-268
COLD WEATHER OPERATION INFORMATION	3-268
PRECAUTIONS AFTER DAILY WORK COMPLETION	3-270
AFTER COLD WEATHER SEASON	3-270
PRECAUTIONS FOR LONG-TERM STORAGE	3-271
PREPARATION FOR LONG-TERM STORAGE	3-271
MAINTENANCE DURING LONG-TERM STORAGE	3-271
STARTING MACHINE AFTER LONG-TERM STORAGE	3-272
TROUBLES AND ACTIONS	3-273
ACTIONS WHEN RUNNING OUT OF FUEL	3-273
PHENOMENA THAT ARE NOT FAILURES	3-274
PRECAUTIONS FOR TOWING MACHINE	3-275
PRECAUTIONS FOR SEVERE JOB CONDITION	3-276
PRECAUTIONS FOR DISCHARGED BATTERY	3-277
OTHER TROUBLE	3-282
MAINTENANCE	4-1
PRECAUTIONS FOR MAINTENANCE	4-2
CHECK SERVICE METER READING	4-2
KOMATSU GENUINE REPLACEMENT PARTS	4-2
KOMATSU GENUINE LUBRICANTS	4-2
ALWAYS USE CLEAN WASHER FLUID	4-2
FRESH AND CLEAN LUBRICANTS	4-2
CHECK DRAINED OIL AND USED FILTER	4-2
PRECAUTIONS FOR REFILLING OIL OR FUEL	4-2
PRECAUTIONS FOR ADDING DEF	4-2