

# SHOP MANUAL

**KOMATSU**

# PC400-1 PC400LC-1

MACHINE MODEL	SERIAL No.
<b>PC400-1</b>	<b>10001 and up</b>
<b>PC400LC-1</b>	<b>10124 and up</b>

# CONTENTS

<b>GENERAL</b> .....	01-1
----------------------	------

## ENGINE

11 STRUCTURE AND FUNCTION .....	11-1
12 TESTING AND ADJUSTING .....	12-1
13 DISASSEMBLY AND ASSEMBLY .....	13-1
14 MAINTENANCE STANDARD .....	14-1

## POWER TRAIN

21 STRUCTURE AND FUNCTION .....	21-1
22 TESTING AND ADJUSTING .....	22-1
23 DISASSEMBLY AND ASSEMBLY .....	23-1
24 MAINTENANCE STANDARD .....	24-1

## UNDERCARRIAGE

31 STRUCTURE AND FUNCTION .....	31-1
33 DISASSEMBLY AND ASSEMBLY .....	33-1
34 MAINTENANCE STANDARD .....	34-1

## HYDRAULIC SYSTEM

61 STRUCTURE AND FUNCTION .....	61-1
62 TESTING AND ADJUSTING .....	62-1
63 DISASSEMBLY AND ASSEMBLY .....	63-1
64 MAINTENANCE STANDARD .....	64-1

## WORK EQUIPMENT

71 STRUCTURE AND FUNCTION .....	71-1
72 TESTING AND ADJUSTING .....	72-1
73 DISASSEMBLY AND ASSEMBLY .....	73-1
74 MAINTENANCE STANDARD .....	74-1

## OTHERS

91 ELECTRICAL SYSTEM .....	91-1
93 DISASSEMBLY AND ASSEMBLY .....	93-1