

Operation & Maintenance Manual

HYDRAULIC
EXCAVATOR

PC400-8 **PC400LC-8**
PC450-8 **PC450LC-8**

SERIAL NUMBERS

PC400-70001 and up
PC450-70001

ecot3

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU

CONTENTS

FOREWORD ----- 1- 1

 BEFORE READING THIS MANUAL ----- 1- 2

 SAFETY INFORMATION ----- 1- 3

 INTRODUCTION ----- 1- 4

 USE OF MACHINE ----- 1- 4

 DIRECTIONS OF MACHINE ----- 1- 4

 VISIBILITY FROM OPERATOR'S SEAT ----- 1- 5

 PRODUCT INFORMATION ----- 1- 7

 PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE ----- 1- 7

 EPA REGULATIONS, ENGINE NUMBER PLATE ----- 1- 7

 SERVICE METER LOCATION ----- 1- 8

 YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR ----- 1- 8

SAFETY ----- 2- 1

 SAFETY ----- 2- 2

 SAFETY LABELS ----- 2- 5

 LOCATION OF SAFETY LABELS ----- 2- 5

 SAFETY LABELS ----- 2- 6

 GENERAL PRECAUTIONS COMMON TO OPERATION AND MAINTENANCE ----- 2- 12

 PRECAUTIONS BEFORE STARTING OPERATION ----- 2- 12

 PREPARATIONS FOR SAFE OPERATION ----- 2- 12

 FIRE PREVENTION ----- 2- 14

 PRECAUTIONS WHEN GETTING ON OR OFF MACHINE ----- 2- 15

 DO NOT GET CAUGHT IN WORK EQUIPMENT ----- 2- 17

 PRECAUTIONS RELATED TO PROTECTIVE STRUCTURES ----- 2- 17

 PROTECTION AGAINST FALLING, FLYING, INTRUDING OBJECTS ----- 2- 17

 UNAUTHORIZED MODIFICATION ----- 2- 18

 PRECAUTIONS RELATED TO ATTACHMENTS AND OPTIONS ----- 2- 18

 PRECAUTIONS RELATED TO CAB GLASS ----- 2- 18

 PRECAUTIONS WHEN RUNNING ENGINE INSIDE BUILDING ----- 2- 18

 PRECAUTIONS FOR OPERATION ----- 2- 19

 PRECAUTIONS FOR JOBSITE ----- 2- 19

 STARTING ENGINE ----- 2- 21

 OPERATION ----- 2- 23

 TRANSPORTATION ----- 2- 31

 TOWING ----- 2- 32

 LIFTING OBJECTS WITH BUCKET ----- 2- 33

 PRECAUTIONS FOR MAINTENANCE ----- 2- 34

 PRECAUTIONS BEFORE STARTING INSPECTION AND MAINTENANCE ----- 2- 34

 PRECAUTIONS FOR INSPECTION AND MAINTENANCE ----- 2- 38

OPERATION ----- 3- 1

 MACHINE VIEW ILLUSTRATIONS ----- 3- 2

 OVERALL MACHINE VIEW ----- 3- 2

 CONTROLS AND GAUGES ----- 3- 3

 DETAILED CONTROLS AND GAUGES ----- 3- 5

 MONITORING SYSTEM ----- 3- 5

 SWITCHES ----- 3- 70

 CONTROL LEVERS AND PEDALS ----- 3- 75

 SUN ROOF ----- 3- 78

 WINDSHIELD ----- 3- 78

EMERGENCY ESCAPE HAMMER	3- 84
DOOR LOCK	3- 84
CAP WITH LOCK	3- 85
DRINK BOX	3- 87
MAGAZINE BOX	3- 87
ASHTRAY	3- 87
AIR CONDITIONER CONTROLS	3- 88
RADIO	3-101
AUXILIARY ELECTRIC POWER	3-106
FUSE	3-107
FUSIBLE LINK	3-108
CONTROLLER	3-108
TOOL BOX	3-109
GREASE PUMP HOLDER	3-109
FIRE EXTINGUISHER	3-109
MACHINE OPERATIONS AND CONTROLS	3-110
BEFORE STARTING ENGINE	3-110
STARTING ENGINE	3-129
AFTER STARTING ENGINE	3-132
STOPPING THE ENGINE	3-143
MACHINE OPERATION	3-144
STEERING THE MACHINE	3-148
SWINGING	3-150
WORK EQUIPMENT CONTROLS AND OPERATIONS	3-151
WORKING MODE	3-153
PROHIBITED OPERATIONS	3-155
GENERAL OPERATION INFORMATION	3-160
TRAVELING ON SLOPES	3-162
ESCAPE FROM MUD	3-164
RECOMMENDED APPLICATIONS	3-165
BUCKET REPLACEMENT AND INVERSION	3-167
PARKING MACHINE	3-171
MACHINE INSPECTION AFTER DAILY WORK	3-172
LOCKING	3-173
TRANSPORTATION	3-174
TRANSPORTATION PROCEDURE	3-174
LOADING AND UNLOADING WITH TRAILER	3-175
LIFTING MACHINE	3-184
TRANSPORTATION POSTURE	3-186
PROCEDURE FOR INCREASING OR REDUCING TRACK FRAME GAUGE	3-189
COLD WEATHER OPERATION	3-191
COLD WEATHER OPERATION INFORMATION	3-191
AFTER DAILY WORK COMPLETION	3-193
AFTER COLD WEATHER SEASON	3-193
LONG TERM STORAGE	3-194
BEFORE STORAGE	3-194
DURING STORAGE	3-194
AFTER STORAGE	3-195
STARTING MACHINE AFTER LONG-TERM STORAGE	3-195
TROUBLES AND ACTIONS	3-196