

Operation & Maintenance Manual

PC40MRx-1 PC45MRx-1

HYDRAULIC EXCAVATOR

SERIAL NUMBERS

PC40MRx - 3938 and up
PC45MRx - 2042

This material is proprietary to Komatsu America International Company and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America International Company.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or add improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, periodic revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

CONTENTS

FOREWORD 1- 1

 FOREWORD 1- 2

 SAFETY INFORMATION 1- 5

 INTRODUCTION 1- 7

 DIRECTIONS OF MACHINE 1- 7

 PRODUCT INFORMATION 1- 8

 MACHINE SERIAL NUMBER PLATE AND ITS LOCATION 1- 8

 ENGINE SERIAL NUMBER PLATE AND ITS LOCATION 1- 8

 EMISSION CONTROL INFORMATION LABEL AND ITS LOCATION 1- 9

 SERVICE METER LOCATION 1- 9

 YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR 1- 10

SAFETY 2- 1

 SAFETY INFORMATION 2- 2

 WARNING LABELS AND PICTOGRAMS 2- 4

 WARNING LABELS AND PICTOGRAMS - LOCATION 2- 5

 WARNING LABELS AND PICTOGRAMS - ACTUAL 2- 6

 SAFETY INFORMATION 2- 12

 SAFETY MACHINE OPERATION 2- 20

 STARTING ENGINE 2- 20

 OPERATION 2- 22

 TRANSPORTATION 2- 28

 BATTERY 2- 29

 TOWING 2- 31

 LIFTING OBJECTS WITH BUCKET 2- 32

 SAFETY MAINTENANCE INFORMATION 2- 33

OPERATION 3- 1

 MACHINE VIEW ILLUSTRATIONS 3- 2

 OVERALL MACHINE VIEW 3- 2

 CONTROLS AND GAUGES 3- 3

 DETAILED CONTROLS AND GAUGES 3- 4

 MONITORING SYSTEM 3- 4

 SWITCHES 3- 9

 CONTROL LEVERS AND PEDALS 3- 12

 WINDSHIELD 3- 17

 SLIDING DOOR 3- 20

 SLIDING WINDOW 3- 21

 REAR WINDOW 3- 21

 EMERGENCY ESCAPE HAMMER 3- 22

 CAP WITH LOCK 3- 23

 ENGINE HOOD 3- 24

 MUD COVER 3- 25

 FUSE 3- 26

 BLOCK FUSE 3- 26

 AUXILIARY ELECTRIC POWER 3- 27

 OPERATION MANUAL STORAGE 3- 27

 TOOL BOX 3- 27

 GREASE PUMP HOLDER 3- 28

 ASHTRAY 3- 28

 MACHINE OPERATIONS AND CONTROLS 3- 29

BEFORE STARTING ENGINE -----	3- 29
STARTING ENGINE -----	3- 43
AFTER STARTING ENGINE -----	3- 46
STOPPING THE ENGINE -----	3- 48
CHECK AFTER SHUT OFF ENGINE -----	3- 48
MACHINE OPERATION -----	3- 49
STEERING THE MACHINE -----	3- 53
SWINGING -----	3- 55
WORK EQUIPMENT CONTROLS AND OPERATIONS -----	3- 56
PROHIBITED OPERATIONS -----	3- 58
GENERAL OPERATION INFORMATION -----	3- 60
TRAVELING ON SLOPES -----	3- 62
ESCAPE FROM MUD -----	3- 64
RECOMMENDED APPLICATIONS -----	3- 65
BUCKET REPLACEMENT -----	3- 67
PARKING MACHINE -----	3- 68
MACHINE INSPECTION AFTER DAILY WORK -----	3- 69
LOCKING -----	3- 69
RUBBER SHOES AND ROAD LINERS -----	3- 70
TRANSPORTATION -----	3- 75
TRANSPORTATION PROCEDURE -----	3- 75
LOADING AND UNLOADING WITH TRAILER -----	3- 75
LIFTING MACHINE -----	3- 80
COLD WEATHER OPERATION -----	3- 82
COLD WEATHER OPERATION INFORMATION -----	3- 82
CAB HEATER IN COLD WEATHER -----	3- 83
AFTER DAILY WORK COMPLETION -----	3- 84
AFTER COLD WEATHER SEASON -----	3- 84
LONG TERM STORAGE -----	3- 85
BEFORE STORAGE -----	3- 85
DURING STORAGE -----	3- 85
AFTER STORAGE -----	3- 86
TROUBLES AND ACTIONS -----	3- 87
RUNNING OUT OF FUEL -----	3- 87
PHENOMENA THAT ARE NOT FAILURES -----	3- 87
TOWING THE MACHINE -----	3- 87
SEVERE JOB CONDITION -----	3- 88
DISCHARGED BATTERY -----	3- 88
OTHER TROUBLE -----	3- 92
MAINTENANCE -----	4- 1
MAINTENANCE INFORMATION -----	4- 2
LUBRICANTS, COOLANT AND FILTERS -----	4- 4
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC -----	4- 4
ELECTRIC SYSTEM MAINTENANCE -----	4- 6
WEAR PARTS -----	4- 7
WEAR PARTS LIST -----	4- 7
LUBRICANTS, FUEL AND COOLANT SPECIFICATIONS -----	4- 8
PROPER SELECTION -----	4- 8
TIGHTENING TORQUE SPECIFICATIONS -----	4- 12
TIGHTENING TORQUE LIST -----	4- 12