

Operation & Maintenance Manual

UEAM007200

PC450-8

PC450LC-8

HYDRAULIC EXCAVATOR

SERIAL NUMBER

PC450-8 - K50001 and up

PC450LC-8 - K50001 and up

PC450LCD-8 - K50001 and up

PC450LCHD-8 - K50001 and up



WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept inside the cab for reference and periodically reviewed by all personnel who will come into contact with the machine.

KOMATSU

CONTENTS

FOREWORD

| | |
|---|------|
| FOREWORD | 1-2 |
| SAFETY INFORMATION | 1-3 |
| Noise emission levels | 1-5 |
| Vibration levels..... | 1-6 |
| Guide to Reduce Vibration Levels on Machine..... | 1-6 |
| INTRODUCTION | 1-8 |
| DIRECTIONS OF MACHINE | 1-8 |
| VISIBILITY FROM OPERATOR'S SEAT | 1-9 |
| PROXIMITY VISIBILITY | 1-9 |
| 12M CIRCUMFERENCE VISIBILITY | 1-9 |
| BREAKING-IN THE NEW MACHINE | 1-10 |
| PRODUCT INFORMATION | 1-11 |
| PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE..... | 1-11 |
| EPA REGULATIONS, ENGINE NUMBER PLATE | 1-11 |
| SERVICE METER LOCATION | 1-12 |
| YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR | 1-12 |
| MACHINE SERIAL PLATE | 1-13 |

SAFETY

| | |
|---|------|
| SAFETY INFORMATION | 2-2 |
| SAFETY LABELS | 2-4 |
| LOCATION OF SAFETY LABELS | 2-4 |
| SAFETY LABELS | 2-5 |
| SAFETY INFORMATION | 2-13 |
| SAFETY MACHINE OPERATION | 2-22 |
| STARTING ENGINE | 2-22 |
| OPERATION..... | 2-24 |
| TRANSPORTATION..... | 2-30 |
| BATTERY | 2-31 |
| TOWING | 2-33 |
| LIFTING OBJECTS WITH BUCKET | 2-34 |
| SAFETY MAINTENANCE INFORMATION | 2-35 |

OPERATION

| | |
|--|-------|
| MACHINE VIEW ILLUSTRATIONS | 3-2 |
| OVERALL MACHINE VIEW..... | 3-2 |
| CONTROLS AND GAUGES..... | 3-3 |
| Machine Monitor | 3-4 |
| DETAILED CONTROLS AND GAUGES | 3-5 |
| MONITORING SYSTEM..... | 3-5 |
| Basic Operation of Machine Monitor..... | 3-6 |
| Emergency Monitors..... | 3-11 |
| Caution Monitors..... | 3-13 |
| Basic Check Monitors | 3-16 |
| Meter Display Portion | 3-18 |
| Monitor Switches Portion | 3-25 |
| Handling Function Switches | 3-33 |
| Attachment 2 Setting | 3-54 |
| SWITCHES | 3-69 |
| CONTROL LEVERS AND PEDALS | 3-75 |
| SUN ROOF | 3-78 |
| WINDSHIELD | 3-79 |
| EMERGENCY ESCAPE HAMMER | 3-84 |
| DOOR LOCK | 3-85 |
| CAP WITH LOCK..... | 3-85 |
| DRINK BOX | 3-87 |
| MAGAZINE BOX..... | 3-87 |
| ASHTRAY | 3-87 |
| AIR CONDITIONER CONTROLS..... | 3-88 |
| Air Conditioner Control Panel | 3-88 |
| Method of Operation..... | 3-92 |
| Use Air Conditioner with Care | 3-98 |
| Inspection and maintenance of Air Conditioner Equipped Machine | 3-99 |
| RADIO..... | 3-100 |
| Control Panel..... | 3-100 |
| Controls of Radio | 3-102 |
| Use Radio with Care..... | 3-104 |
| Space for radio cassette | 3-104 |
| AUXILIARY ELECTRIC POWER..... | 3-105 |
| 24V Power Source..... | 3-105 |
| 12V Power Source..... | 3-105 |
| FUSE | 3-106 |
| FUSIBLE LINK | 3-107 |
| CONTROLLER | 3-107 |
| TOOL BOX..... | 3-108 |
| GREASE PUMP HOLDER..... | 3-108 |
| FIRE EXTINGUISHER..... | 3-108 |
| REFUELLING PUMP | 3-109 |
| ACCUMULATOR | 3-110 |