

# Shop Manual

COMPACT  
HYDRAULIC  
EXCAVATOR

***PC45MR-5***  
***PC55MR-5***

SERIAL NUMBERS

PC45MR-30001  
PC55MR-20001

and up

**KOMATSU**

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-11
FOREWORD, SAFETY, BASIC INFORMATION .....	00-17
HOW TO READ THE SHOP MANUAL.....	00-17
SAFETY NOTICE FOR OPERATION.....	00-19
PRECAUTIONS TO PREVENT FIRE.....	00-27
ACTIONS IF FIRE OCCURS .....	00-29
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS.....	00-30
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-31
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-34
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-41
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-43
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-44
PRACTICAL USE OF KOMTRAX.....	00-45
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-46
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS.....	00-50
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-54
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-55
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-57
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-58
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE ..	00-60
HOW TO READ ELECTRICAL WIRE CODE .....	00-61
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-65
STANDARD TIGHTENING TORQUE TABLE.....	00-68
CONVERSION TABLE .....	00-75
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-9
SPECIFICATION DRAWING.....	01-9
WORKING RANGE DRAWINGS .....	01-13
SPECIFICATIONS .....	01-15
WEIGHT TABLE .....	01-23
TABLE OF FUEL, COOLANT, AND LUBRICANTS .....	01-27
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
ABBREVIATION LIST .....	10-4
BOOT-UP SYSTEM.....	10-10
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-10
SYSTEM OPERATING LAMP SYSTEM .....	10-12
BATTERY DISCONNECT SWITCH .....	10-14
ENGINE SYSTEM .....	10-15
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-15
ENGINE CONTROL SYSTEM .....	10-16
AUTO-DECELERATION SYSTEM.....	10-20
OVERHEAT PREVENTION SYSTEM.....	10-22
AUTOMATIC IDLE STOP SYSTEM .....	10-24
COMPONENT PARTS OF ENGINE SYSTEM .....	10-26
COOLING SYSTEM.....	10-27
LAYOUT DRAWING OF COOLING SYSTEM .....	10-27
CONTROL SYSTEM.....	10-29
LAYOUT DRAWING OF CONTROL SYSTEM.....	10-29
MACHINE MONITOR SYSTEM .....	10-30
KOMTRAX SYSTEM.....	10-31
COMPONENT PARTS OF CONTROL SYSTEM.....	10-32