

Operation & Maintenance Manual

SEAM015304T

PC35R-8 PC45R-8

HYDRAULIC EXCAVATOR

SERIAL NUMBERS PC35R-37582
 PC45R-5938 and up

⚠ WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU

5. CONTENTS

| | |
|---|-------------|
| 1. Foreword | 0- 1 |
| 2. Safety information | 0- 4 |
| 3. Introduction | 0- 5 |
| 4. Location of plates, table to enter serial No. and distributor | 0- 6 |

SAFETY

| | |
|--|-------------|
| 6. General precautions | 1- 2 |
| 7. Precautions during operation | 1- 7 |
| 7.1 Before starting engine | 1- 7 |
| 7.2 Operating machine | 1- 9 |
| 7.3 Transportation | 1-16 |
| 7.4 Battery | 1-17 |
| 7.5 Towing | 1-19 |
| 7.6 Lifting operations | 1-19 |
| 7.7 Window washer fluid | 1-19 |
| 8. Precautions for maintenance | 1-20 |
| 8.1 Before carrying out maintenance | 1-20 |
| 8.2 During maintenance | 1-24 |
| 9. Position for attaching safety labels | 1-29 |

OPERATION

| | |
|---|-------------|
| 10. General view | 2- 2 |
| 10.1 General view of machine | 2- 2 |
| 10.2 General view of controls and gauges | 2- 3 |
| 11. Explanation of components | 2- 4 |
| 11.1 Machine monitor | 2- 4 |
| 11.2 Switches | 2- 9 |
| 11.3 Control levers and pedals | 2-12 |
| 11.4 Engine food | 2-15 |
| 11.5 Front window (Machines equipped with cab) | 2-17 |
| 11.6 Sliding door (Machines equipped with cab) | 2-19 |
| 11.7 Hammer for emergency escape (Machines equipped with cab) | 2-20 |
| 11.8 Fuses | 2-20 |
| 11.9 Fusible link | 2-21 |
| 11.10 Cap, cover with lock | 2-21 |
| 11.11 Manual pocket | 2-22 |
| 11.12 Tool box | 2-22 |
| 11.13 Dust indicator | 2-22 |

5. CONTENTS

| | |
|--|-------------|
| 12. Operation | 2-23 |
| 12.1 Check before starting engine | 2-23 |
| 12.2 Starting engine..... | 2-32 |
| 12.3 Operations and checks after starting engine..... | 2-34 |
| 12.4 Moving machine off | 2-36 |
| 12.5 Steering machine | 2-39 |
| 12.6 Stopping machine | 2-41 |
| 12.7 Swinging | 2-42 |
| 12.8 Operation of work equipment | 2-43 |
| 12.9 Prohibitions for operation | 2-44 |
| 12.10 Precautions for operation | 2-47 |
| 12.11 Precautions when traveling up or down hills | 2-48 |
| 12.12 How to escape from mud | 2-50 |
| 12.13 Work possible using hydraulic excavator | 2-51 |
| 12.14 Replacement of bucket | 2-53 |
| 12.15 Parking machine | 2-56 |
| 12.16 Check after finishing work | 2-57 |
| 12.17 Stopping engine | 2-57 |
| 12.18 Check after stopping engine | 2-58 |
| 12.19 Locking | 2-58 |
| 12.20 Handling rubber shoes (Rubber shoes only)..... | 2-59 |
| 13. Transportation | 2-64 |
| 13.1 Loading, unloading work | 2-64 |
| 13.2 Method of lifting machine | 2-66 |
| 13.3 Precautions for loading and securing machine | 2-68 |
| 13.4 Precautions for transportation | 2-69 |
| 14. Cold weather operation | 2-70 |
| 14.1 Precautions for low temperature | 2-70 |
| 14.2 Precautions after completion of work | 2-72 |
| 14.3 Preparing the cab heater (Machines equipped with cab) | 2-72 |
| 14.4 After cold weather | 2-72 |
| 15. Long-term storage | 2-73 |
| 15.1 Before storage | 2-73 |
| 15.2 During storage | 2-74 |
| 15.3 After storage | 2-74 |
| 16. Troubleshooting | 2-75 |
| 16.1 Phenomena that are not failures | 2-75 |
| 16.2 Method of towing machine | 2-75 |
| 16.3 Precautions on particular jobsites | 2-75 |
| 16.4 If battery is discharged | 2-76 |
| 16.5 Other trouble | 2-80 |