

Shop Manual

PC490LC-11

HYDRAULIC EXCAVATOR

SERIAL NUMBERS **PC490LC-11 A41001** and up

ENGINE **6D125E-7**

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-19
FOREWORD, SAFETY, BASIC INFORMATION	00-25
HOW TO READ THE SHOP MANUAL.....	00-25
SAFETY NOTICE FOR OPERATION.....	00-27
PRECAUTIONS TO PREVENT FIRE.....	00-35
ACTIONS IF FIRE OCCURS	00-37
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-38
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-39
PRECAUTIONS FOR DEF.....	00-40
STORE AdBlue/DEF	00-41
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-42
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-45
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-52
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-54
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-55
PRACTICAL USE OF KOMTRAX	00-56
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-57
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-61
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-65
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-66
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-68
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE ..	00-71
HOW TO READ ELECTRICAL WIRE CODE	00-72
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-76
STANDARD TIGHTENING TORQUE TABLE.....	00-79
CONVERSION TABLE	00-86
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING.....	01-9
WORKING RANGE DRAWINGS	01-11
SPECIFICATIONS	01-12
WEIGHT TABLE	01-15
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-17
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-5
UREA SCR SYSTEM.....	10-11
LAYOUT DRAWING OF UREA SCR SYSTEM	10-11
UREA SCR SYSTEM DIAGRAM	10-15
FUNCTION OF UREA SCR SYSTEM.....	10-16
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-32
BOOT-UP SYSTEM	10-41
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-41
SYSTEM OPERATING LAMP SYSTEM	10-43
BATTERY DISCONNECT SWITCH	10-44
ENGINE SYSTEM	10-45
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-45
ENGINE CONTROL SYSTEM	10-48
AUTO-DECELERATION SYSTEM.....	10-51
ENGINE AUTOMATIC WARM-UP SYSTEM.....	10-53
OVERHEAT PREVENTION SYSTEM.....	10-55

TURBOCHARGER PROTECTION SYSTEM	10-58
AUTOMATIC IDLE STOP SYSTEM	10-60
COMPONENT PARTS OF ENGINE SYSTEM	10-63
COOLING SYSTEM.....	10-79
LAYOUT DRAWING OF COOLING SYSTEM	10-79
FAN SPEED CONTROL SYSTEM OF HYDRAULIC FAN.....	10-82
ENGINE OUTPUT CONTROL SYSTEM OF HYDRAULIC FAN.....	10-84
FAN REVERSE ROTATION SYSTEM OF HYDRAULIC FAN.....	10-87
COMPONENT PARTS OF COOLING SYSTEM.....	10-88
CONTROL SYSTEM.....	10-102
LAYOUT DRAWING OF CONTROL SYSTEM	10-102
MACHINE MONITOR SYSTEM	10-105
KOMTRAX SYSTEM.....	10-106
COMPONENT PARTS OF CONTROL SYSTEM.....	10-107
HYDRAULIC SYSTEM.....	10-137
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-137
CLSS	10-139
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-158
PUMP AND VALVE CONTROL SYSTEM	10-165
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-168
WORK EQUIPMENT SYSTEM	10-256
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-256
STRUCTURE OF VALVE CONTROL.....	10-261
PPC LEVERS	10-262
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-264
MACHINE PUSH-UP SYSTEM.....	10-266
PPC LOCK SYSTEM	10-268
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-269
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-271
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-273
SWING SYSTEM.....	10-297
LAYOUT DRAWING OF SWING SYSTEM	10-297
SWING CONTROL SYSTEM DIAGRAM	10-303
COMPONENT PARTS OF SWING SYSTEM.....	10-307
TRAVEL SYSTEM.....	10-322
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-322
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-326
COMPONENT PARTS OF TRAVEL SYSTEM	10-328
UNDERCARRIAGE AND FRAME.....	10-350
LAYOUT DRAWING OF UNDERCARRIAGE	10-350
WORK EQUIPMENT.....	10-351
STRUCTURE OF WORK EQUIPMENT	10-351
FUNCTION OF WORK EQUIPMENT	10-352
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-353
BUCKET CLEARANCE ADJUSTMENT SHIM	10-354
CAB AND ITS ATTACHMENTS	10-355
ROPS CAB	10-355
CAB MOUNT	10-356
CAB TIPPING STOPPER	10-357
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE: PC490LC-11	20-9
STANDARD VALUE TABLE FOR MACHINE.....	20-12
STANDARD VALUE TABLE FOR MACHINE: PC490LC-11	20-12
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-28
STANDARD VALUE TABLE FOR ELECTRICAL	20-32