

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC490LCi-11***

SERIAL NUMBERS 85113 and up

**KOMATSU**

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-22
FOREWORD, SAFETY, BASIC INFORMATION .....	00-27
HOW TO READ THE SHOP MANUAL .....	00-27
SAFETY NOTICE FOR OPERATION .....	00-29
PRECAUTIONS TO PREVENT FIRE .....	00-37
ACTIONS IF FIRE OCCURS .....	00-39
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-40
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS .....	00-41
PRECAUTIONS FOR DEF .....	00-42
STORE AdBlue/DEF .....	00-43
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-44
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS .....	00-47
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT .....	00-53
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-55
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-56
PRACTICAL USE OF KOMTRAX .....	00-57
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-58
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-62
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-66
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-67
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-72
HOW TO READ ELECTRICAL WIRE CODE .....	00-73
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD .....	00-77
STANDARD TIGHTENING TORQUE TABLE .....	00-80
CONVERSION TABLE .....	00-87
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-8
SPECIFICATION DRAWING .....	01-8
WORKING RANGE DRAWINGS .....	01-10
SPECIFICATIONS .....	01-11
WEIGHT TABLE .....	01-15
TABLE OF FUEL, COOLANT, AND LUBRICANTS .....	01-17
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
ABBREVIATION LIST .....	10-6
UREA SCR SYSTEM .....	10-11
LAYOUT DRAWING OF UREA SCR SYSTEM .....	10-11
UREA SCR SYSTEM DIAGRAM .....	10-15
FUNCTION OF UREA SCR SYSTEM .....	10-16
COMPONENT PARTS OF UREA SCR SYSTEM .....	10-33
BOOT-UP SYSTEM .....	10-42
LAYOUT DRAWING OF BOOT-UP SYSTEM .....	10-42
SYSTEM OPERATING LAMP SYSTEM .....	10-44
BATTERY DISCONNECT SWITCH .....	10-45
ENGINE SYSTEM .....	10-46
LAYOUT DRAWING OF ENGINE SYSTEM .....	10-46
ENGINE CONTROL SYSTEM .....	10-49
AUTO-DECELERATION SYSTEM .....	10-52
ENGINE AUTOMATIC WARM-UP SYSTEM .....	10-54
OVERHEAT PREVENTION SYSTEM .....	10-56

TURBOCHARGER PROTECTION SYSTEM .....	10-59
AUTOMATIC IDLE STOP SYSTEM .....	10-61
COMPONENT PARTS OF ENGINE SYSTEM .....	10-64
COOLING SYSTEM.....	10-81
LAYOUT DRAWING OF COOLING SYSTEM .....	10-81
FAN SPEED CONTROL SYSTEM OF HYDRAULIC FAN.....	10-84
ENGINE OUTPUT CONTROL SYSTEM OF HYDRAULIC FAN.....	10-86
FAN REVERSE ROTATION SYSTEM OF HYDRAULIC FAN.....	10-89
COMPONENT PARTS OF COOLING SYSTEM.....	10-90
CONTROL SYSTEM.....	10-104
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-104
MACHINE MONITOR SYSTEM .....	10-107
KOMTRAX SYSTEM.....	10-108
COMPONENT PARTS OF CONTROL SYSTEM.....	10-109
HYDRAULIC SYSTEM.....	10-143
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-143
CLSS .....	10-145
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-164
PUMP AND VALVE CONTROL SYSTEM .....	10-171
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-174
WORK EQUIPMENT SYSTEM .....	10-262
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-262
STRUCTURE OF VALVE CONTROL.....	10-267
ONE-TOUCH POWER MAXIMIZING SYSTEM .....	10-268
MACHINE PUSH-UP SYSTEM.....	10-270
PPC LOCK SYSTEM .....	10-272
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM .....	10-273
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-275
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-277
ICT SYSTEM .....	10-295
LAYOUT DRAWING OF ICT SYSTEM.....	10-295
ICT CONTROL SYSTEM DIAGRAM.....	10-297
BUCKET EDGE POSITION DETECTION SYSTEM.....	10-298
THE INTELLIGENT MACHINE CONTROL SYSTEM.....	10-300
CUSHION SYSTEM FOR ARM IN END.....	10-315
BOOM SECONDARY DRIVE SWITCH.....	10-317
COMPONENT PARTS OF ICT SYSTEM .....	10-318
SWING SYSTEM.....	10-352
LAYOUT DRAWING OF SWING SYSTEM .....	10-352
SWING CONTROL SYSTEM DIAGRAM .....	10-357
COMPONENT PARTS OF SWING SYSTEM.....	10-361
TRAVEL SYSTEM.....	10-376
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-376
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-380
COMPONENT PARTS OF TRAVEL SYSTEM .....	10-382
UNDERCARRIAGE AND FRAME.....	10-404
LAYOUT DRAWING OF UNDERCARRIAGE .....	10-404
WORK EQUIPMENT.....	10-405
STRUCTURE OF WORK EQUIPMENT .....	10-405
FUNCTION OF WORK EQUIPMENT .....	10-406
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-407
BUCKET CLEARANCE ADJUSTMENT SHIM .....	10-408
CAB AND ITS ATTACHMENTS .....	10-409
ROPS CAB .....	10-409
CAB MOUNT .....	10-410
CAB TIPPING STOPPER .....	10-411
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2