

SHOP MANUAL

KOMATSU

PC27MR-2, PC30MR-2 PC35MR-2, PC40MR-2 PC50MR-2

MACHINE MODEL	SERIAL NUMBER
---------------	---------------

PC27MR-2	15001 and up
PC30MR-2	20001 and up
PC35MR-2	5001 and up
PC40MR-2	8001 and up
PC50MR-2	5001 and up

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require.
Materials and specifications are subject to change without notice.
- PC27MR-2 mount the 3D82AE-5M engine.
PC30MR-2 mount the 3D84E-5N engine.
PC35MR-2 mount the S3D84E-5PBA and 3D88E-5P engine.
PC40, 50MR-2 mounts the 4D88E-5X engine.
For details of the engine, see the 68E-88E Series Engine Shop Manual.

CONTENTS

	No. of page
01 GENERAL	01-1
10 STRUCTURE, FUNCTION AND MAINTENANCE STANDARD.....	10-1
20 TESTING AND ADJUSTING	20-1
30 DISASSEMBLY AND ASSEMBLY	30-1
90 OTHERS	90-1