

# Operation & Maintenance Manual

---

---

---

SEAM020U0101

# PC50UU-1

HYDRAULIC EXCAVATOR

SERIAL NUMBERS PC50UU-3401 and up

**KOMATSU**

# CONTENTS

<b>OPERATION</b>		<b>MAINTENANCE</b>	
GENERAL LOCATIONS AND SPECIFICATIONS .....	4	PERIODIC MAINTENANCE .....	43
INSTRUMENTS AND CONTROLS .....	5	PERIODICAL REPLACEMENT OF SAFETY PARTS .....	44
CHECK BEFORE STARTING .....	18	MAINTENANCE TABLE .....	46
OPERATING YOUR MACHINE .....	23	OIL FILLER AND LEVEL GAUGE POSITIONS .....	49
REPLACEMENT OF BUCKET .....	38	EVERY 50 HOURS SERVICE .....	50
COLD WEATHER OPERATION .....	39	EVERY 100 HOURS SERVICE .....	51
		INITIAL 250 HOURS SERVICE .....	54
		EVERY 250 HOURS SERVICE .....	54
		EVERY 500 HOURS SERVICE .....	59
		EVERY 1000 HOURS SERVICE .....	62
		EVERY 2000 HOURS SERVICE .....	64
		WHEN REQUIRED .....	66
		HANDLING RUBBER SHOES .....	72
		TROUBLE SHOOTING GUIDE .....	77
		SERVICE METER .....	80
		MACHINE AND ENGINE SERIAL NUMBERS .....	81
		FUEL, COOLANT AND LUBRICANTS .....	82