

# Operation & Maintenance Manual

SEAM005503T

# PC50UU-2

**HYDRAULIC EXCAVATOR**

SERIAL NUMBERS PC50UU-14993 and up

**⚠ WARNING**

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

**NOTICE**

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

**KOMATSU**

# 5. CONTENTS

---

1. Foreword .....	0- 1
2. Safety information .....	0- 4
3. Introduction .....	0- 5
4. Location of plates, table to enter serial No. and distributor .....	0- 6

## SAFETY

6. General precautions .....	1- 2
7. Precautions during operation .....	1- 7
7.1 Before starting engine .....	1- 7
7.2 Operating machine .....	1- 9
7.3 Transportation .....	1-14
7.4 Battery .....	1-15
7.5 Towing .....	1-16
8. Precautions for maintenance .....	1-17
8.1 Before carrying out maintenance .....	1-17
8.2 During maintenance .....	1-19
9. Position for attaching safety labels .....	1-24

## OPERATION

10. General view .....	2- 2
10.1 General view of machine .....	2- 2
10.2 General view of controls and gauges .....	2- 3
11. Explanation of components .....	2- 4
11.1 Machine monitor .....	2- 5
11.2 Switches .....	2-11
11.3 Control levers and pedals .....	2-14
11.4 Engine food .....	2-18
11.5 Front window .....	2-19
11.6 Sliding door .....	2-21
11.7 Fuse box .....	2-22
11.8 Fusible link .....	2-22
11.9 Cap with lock, cover .....	2-23
11.10 Tool box .....	2-24
11.11 Grease gun holder .....	2-24

## 5. CONTENTS

---

<b>12. Operation</b> .....	2-25
12.1 Check before starting engine .....	2-25
12.2 Starting engine .....	2-33
12.3 Operations and checks after starting engine .....	2-35
12.4 Moving machine off .....	2-38
12.5 Steering machine .....	2-40
12.6 Stopping machine .....	2-42
12.7 Swinging .....	2-43
12.8 Prohibitions for operation .....	2-44
12.9 Precautions for operation .....	2-46
12.10 Precautions when traveling up or down hills .....	2-47
12.11 Work possible using hydraulic excavator .....	2-49
12.12 Parking machine .....	2-51
12.13 Check after finishing work .....	2-52
12.14 Stopping engine .....	2-52
12.15 Check after stopping engine .....	2-53
12.16 Locking .....	2-53
12.17 How to escape from mud .....	2-54
12.18 Replacement of bucket .....	2-55
12.19 Handling 4-system .....	2-57
12.20 Handling rubber shoes (rubber shoes only) .....	2-67
<b>13. Transportation</b> .....	2-72
13.1 Loading, unloading work .....	2-72
13.2 Method for lifting chassis .....	2-74
13.3 Precautions for loading .....	2-76
13.4 Precautions for transportation .....	2-77
<b>14. Cold weather operation</b> .....	2-78
14.1 Precautions for low temperature .....	2-78
14.2 Cautions after completion of work .....	2-80
14.3 Preparing the cab heater .....	2-81
14.4 After cold weather .....	2-81
<b>15. Long-term storage</b> .....	2-82
15.1 Before storage .....	2-82
15.2 During storage .....	2-83
15.3 After storage .....	2-83
<b>16. Troubleshooting</b> .....	2-84
16.1 Phenomena that are not failures .....	2-84
16.2 Method of towing machine .....	2-86
16.3 Precautions on particular jobsites .....	2-86
16.4 If battery is discharged .....	2-87
16.5 Other trouble .....	2-91